Canon

CanoScan 9950F

Quick Start Guide

Be sure to install the software programs before connecting the scanner to the computer!

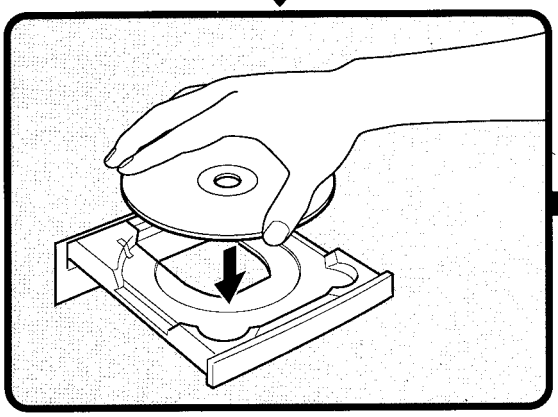

Setup and Scanning

Check the Package Contents p.2

Install the Software

Windows p.3

Macintosh p.4

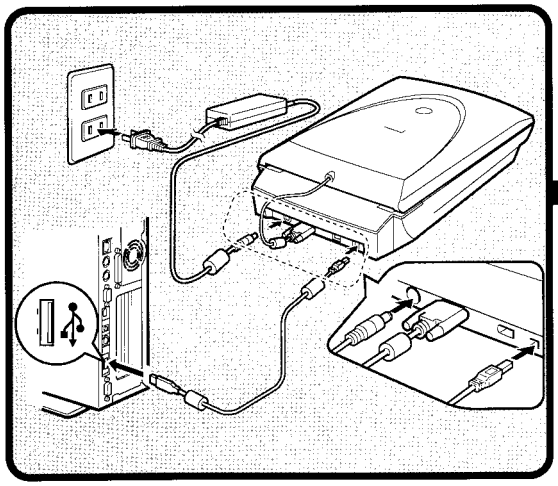

Unlock the Scanning Unit p.5

Connect the Scanner p.6

Try Scanning p.7

Try the Additional Features

● Using the Scanner Buttons p.10

● Scanning Film p.11

Please read this guide before operating this scanner. After you finish reading this guide, store it in a safe place for future reference.

Color Image Scanner Models F917500: (CanoScan 9950F)

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for Class B digital devices, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Use of shielded cable with the ferrite core provided with the scanner is required to comply with Class B limits Subpart B of Part 15 of the FCC rules.

Do not make any changes or modifications to the equipment unless otherwise specified in the manual. If such changes or modifications should be made, you could be required to stop operation of the equipment.

Canon U.S.A. Inc.
One Canon Plaza, Lake Success, NY 11042, U.S.A
Tel No.(516)-328-5600

The socket-outlet shall be installed near the equipment and shall be easily accessible.

Use of a shielded cable with the ferrite core(s) provided with the scanner is necessary to comply with the technical requirements of the EMC Directive.

(Hg) LAMP(S) INSIDE THIS PRODUCT CONTAIN MERCURY AND MUST BE RECYCLED OR DISPOSED OF ACCORDING TO LOCAL, STATE OR FEDERAL LAWS.

Warning

When you use this product, you should pay attention to the following legal issues:

- **Scanning of certain documents, such as bank notes (bank bills), government bonds and public certificates, may be prohibited by law and may result in criminal and/or civil liability.**
- **You may be required under law to obtain authorization from a person possessing copyrights or other legal rights to the item being scanned.**

If you are uncertain of the legality of scanning any particular item, you should consult your legal adviser in advance.

As an ENERGY STAR Partner, Canon Inc. has determined that this model meets the ENERGY STAR Program for energy efficiency.

The International ENERGY STAR Office Equipment Program is an international program that promotes energy saving through the use of computers and other office equipment. The program backs the development and dissemination of products with functions that effectively reduce energy consumption. It is an open system in which business proprietors can participate voluntarily. The targeted products are office equipment such as computers, displays, printers, facsimiles, copiers, scanners and multifunction systems. Their standards and logos are uniform among participating nations.

- CanoScan and ScanGear are trademarks of Canon Inc.
- Adobe, Acrobat and Photoshop are trademarks of Adobe Systems Incorporated.
- Microsoft and Windows are registered trademarks of Microsoft Corporation in the U.S. and other countries.
- Macintosh, Power Macintosh, Mac OS and FireWire are trademarks of Apple Computer, Inc., registered in the U.S. and other countries.
- ScanSoft and OmniPage are trademarks of ScanSoft, Inc.
- Other names and products not mentioned above may be trademarks or registered trademarks of their respective companies.

In this guide, Windows XP screen shots are used to illustrate explanations common to all operating systems.

Guide to the Manuals

Open the Package

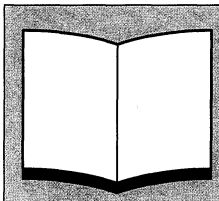

Quick Start Guide (this guide)

This guide describes a series of basic processes from opening the package to using the scanner.
READ THIS GUIDE FIRST!

Scanning Guide (HTML format manual)

Refer to this guide when you have finished setting up the scanner according to the procedures in the *Quick Start Guide*. It describes how to utilize the scanner with the bundled software, and how to solve problems when they occur. You can install this manual onto the hard disk together with the software programs. When you install it, the *Scanning Guide* icon will appear on the desktop. Double-click the icon to view it with a browser program, such as Internet Explorer. You can also view it by clicking the [?] button in ScanGear CS and CanoScan Toolbox.

User Guides for Application Programs (PDF format manuals)

- ArcSoft PhotoStudio
- ScanSoft OmniPage SE
- Presto! PageManager (Windows only)

Select the "View the Electronic Manuals" menu on the CanoScan Setup Utility CD-ROM. To read these manuals, Adobe Acrobat Reader should be installed on your computer.

Check the Package Contents

Scanner and Accessories

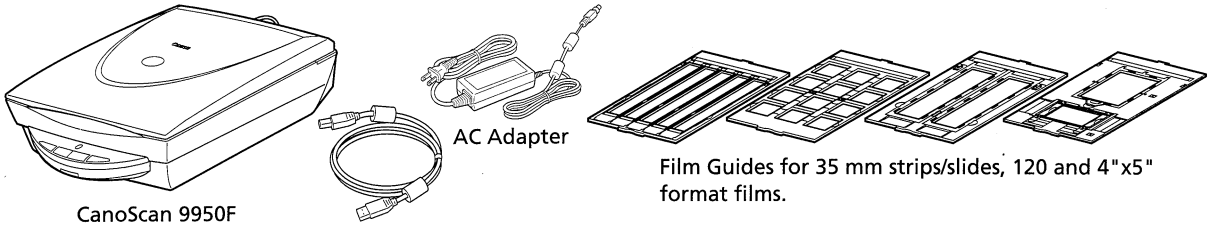

Documents and Software Programs

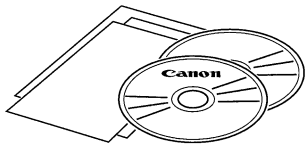

- Quick Start Guide (this guide)
- Additional Documents
- CanoScan Setup Utility CD-ROM

- The two figures in the brackets below indicate the respective sizes of the Windows/ Macintosh versions of the software.
- Approximately 360 MB/ 165 MB (for Windows/Macintosh) of hard disk space on your computer is required to install all the programs. Additional free hard disk space is required to operate the programs.

ScanGear CS (25 MB / 10 MB) - Scanner Driver
It allows you to scan and load images from the scanner.

CanoScan Toolbox (25 MB / 15 MB) - Scanning Utility Program
It makes it easy to scan images and save or print them as well as create e-mail attachments or PDF files. It also works with the scanner buttons.

ArcSoft PhotoStudio (35 MB / 20 MB) - Image Editing Program
It allows you to load images from the scanner, edit and retouch them, and apply special effects and enhancements.

ScanSoft OmniPage SE* (90 MB / 80 MB) - OCR (Optical Character Recognition) Program
It converts characters scanned from a book, magazine or newspaper into text data for editing or digital transmission.
*This does not support Windows 98 first Edition.

Presto! PageManager (Windows only) (150 MB) - Digital Document Management Program
It makes it easy to scan, share and organize documents and photos. It automatically links to other popular programs and avoids file-sharing problems by creating self-executable files.

Adobe Acrobat Reader (25 MB / 30 MB) - PDF File Reader Program

Electronic manuals for the above software programs (HTML (10 MB) and PDF manuals)

- Adobe Photoshop Elements CD-ROM

Adobe Photoshop Elements (135 MB / 170 MB) - Image Editing Program
It loads images from the scanner and allows you to edit and retouch them or apply special effects and enhancements. Please read the instruction sheet or electronic (PDF) manual for Adobe Photoshop Elements.

Install the Software Windows

• If you are running Windows XP or Windows 2000 Professional with multiple user accounts, you should log on with an administrator user name when installing or uninstalling software programs.

1 Turn the computer on.

If the "Found New Hardware Wizard" or "Add New Hardware Wizard" appears, click [Cancel].

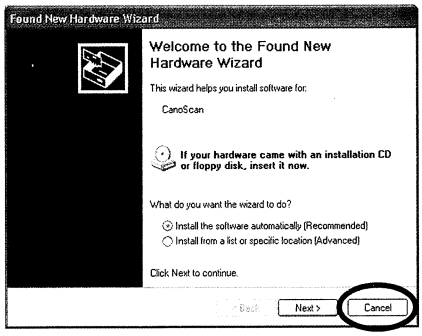
Found New Hardware Wizard
Welcome to the Found New Hardware Wizard
This wizard helps you install software for:
CanoScan
If your hardware came with an installation CD or floppy disk, insert it now.
What do you want the wizard to do?
Install the software automatically (Recommended)
Install from a list or specific location (Advanced)
Click Next to continue.
Next >
Cancel

2 Place the CanoScan Setup Utility CD-ROM in the drive.
The CanoScan Setup Utility main menu will display.

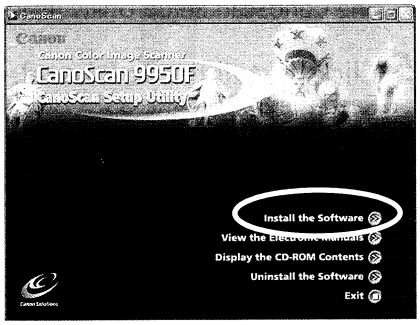

3 Click [Install the Software].
Read the SOFTWARE USER LICENSE AGREEMENT. Click [Yes] if you accept the terms.

The [Install] window will display.

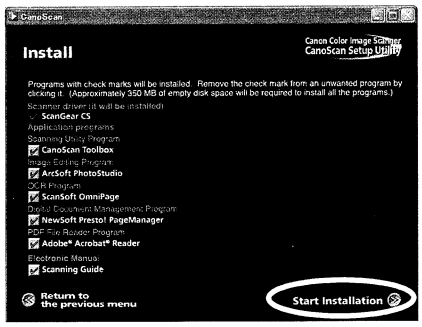
CanoScan
Install
Canon Color Image Scanner
CanoScan Setup Utility
Programs with check marks will be installed. Remove the check mark from an unwanted program by clicking it. (Approximately 350 MB of empty disk space will be required to install all the programs.)
ScanGear CS
CanoScan Toolbox
ArcSoft PhotoStudio
ScanSoft OmniPage
NewSoft Presto! PageManager
Adobe® Acrobat® Reader
Scanning Guide
Return to the previous menu
Start Installation

4 Click [Start Installation].
You will install six software programs and the *Scanning Guide* (HTML format manual).

5 The installation procedure will start.
Follow the on-screen message prompts and click [Next] or [Yes] to continue the installation.

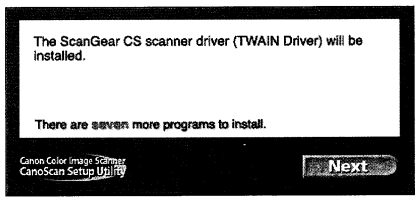
The ScanGear CS scanner driver (TWAIN Driver) will be installed.
There are seven more programs to install.
Canon Color Image Scanner
CanoScan Setup Utility
Next

• In a few cases, your operating system may require a restart. Follow the on-screen messages to restart and resume installation.

6 When the installation is complete, click [Yes].
The computer will restart.

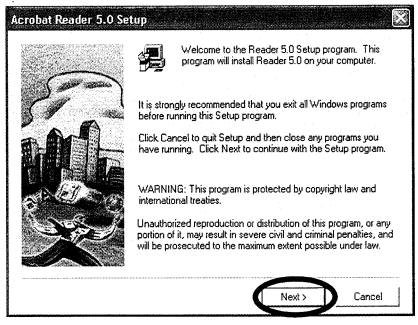
Acrobat Reader 5.0 Setup
Welcome to the Reader 5.0 Setup program. This program will install Reader 5.0 on your computer.
It is strongly recommended that you exit all Windows programs before running this Setup program.
Click Cancel to quit Setup and then close any programs you have running. Click Next to continue with the Setup program.
WARNING: This program is protected by copyright law and international treaties.
Unauthorized reproduction or distribution of this program, or any portion of it, may result in severe civil and criminal penalties, and will be prosecuted to the maximum extent possible under law.
Next >
Cancel

7 After Windows restarts, remove the CD-ROM from the drive and store it in a safe place.

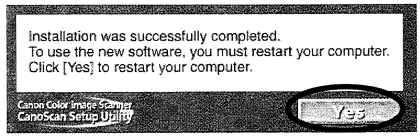
Installation was successfully completed.
To use the new software, you must restart your computer.
Click [Yes] to restart your computer.
Canon Color Image Scanner
CanoScan Setup Utility
Yes

➡ Continue on P. 5.

Install the Software Macintosh

1 Turn the computer on.
Make sure to log in with the first created administrator to install the software. You cannot install the software when logged in using added administrator accounts.

2 Place the CanoScan Setup Utility CD-ROM in the drive.

3 Double-click the CD-ROM icon.

4 Double-click the [SetUp] icon.
The CanoScan Setup Utility main menu will display.

5 Click [Install the Software].
Read the SOFTWARE USER LICENSE AGREEMENT. Click [Yes] if you accept the terms.

The [Install] window will display.

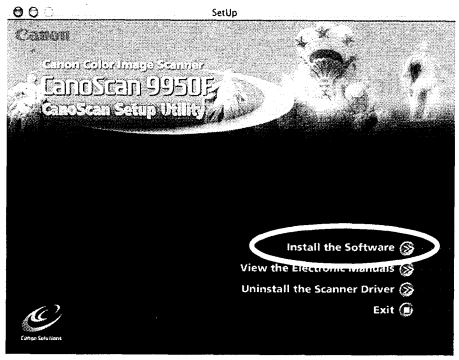

6 Click [Start Installation].
You will install five software programs and the *Scanning Guide* (HTML format manual).

7 The installation procedure will start.
Follow the on-screen message prompts and click [Next], [Yes] or [Install] to continue the installation.

If a verification dialog appears, input the Administrator's name and password.

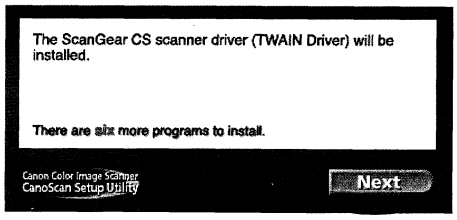
The ScanGear CS scanner driver (TWAIN Driver) will be installed.
There are six more programs to install.
Canon Color Image Scanner
CanoScan Setup Utility
Next

8 When the installation is complete, click [Yes].
The computer will restart.

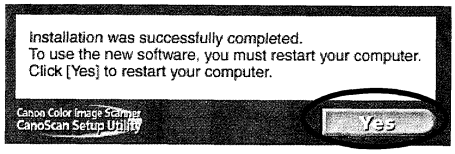
Installation was successfully completed.
To use the new software, you must restart your computer.
Click [Yes] to restart your computer.
Canon Color Image Scanner
CanoScan Setup Utility
Yes

9 After restarting, remove the CD-ROM from the drive and store it in a safe place.

Unlock the Scanning Unit

- Unlock the scanning unit before connecting the scanner to the computer. If it is left locked, a malfunction or other problem may occur.
- Do not tilt the scanner more than 90 degrees from horizontal when releasing the lock.
- When locking the scanner, do not lift up the back and tilt the front (scanner button location) downward. You may be unable to set the lock.

1 Peel the seals off the scanner.

2 Gently turn the scanner over.

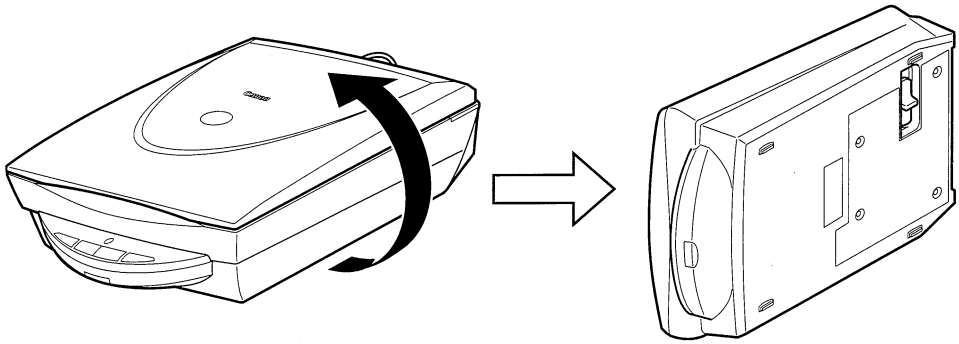

3 Slide the lock switch toward the unlock mark (🔓).

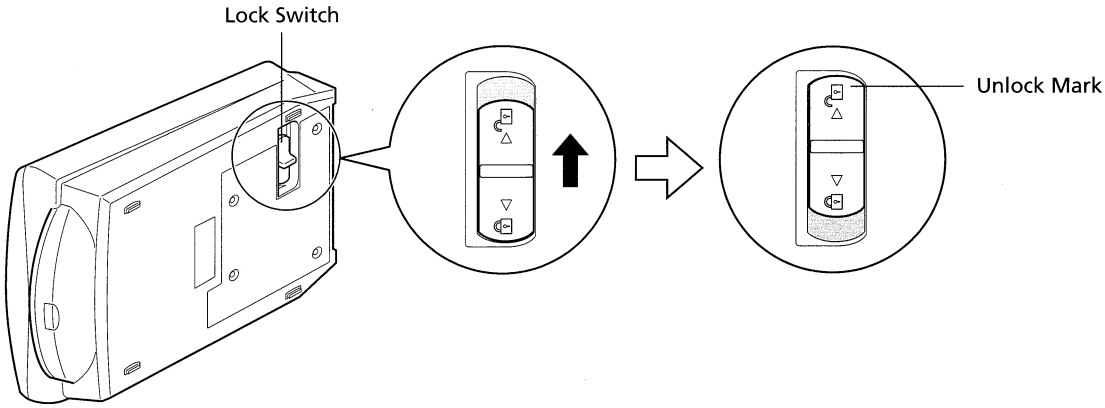

4 Return the scanner to a horizontal position.

- When carrying or transporting the scanner, always lock the scanning unit by pushing the lock switch toward the lock mark (🔒).

Connect the Scanner

1 Connect the FAU cable to the scanner.

2 Connect the scanner to the computer with the supplied USB interface cable.

Supplied USB Interface Cable

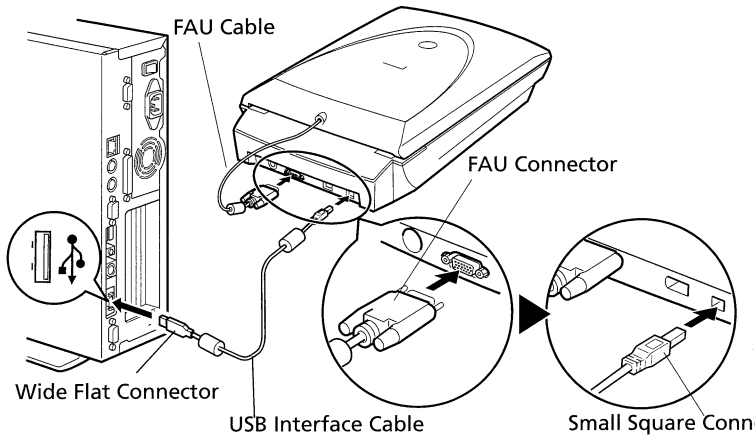

IEEE1394 (FireWire) Interface Cable (Macintosh only)

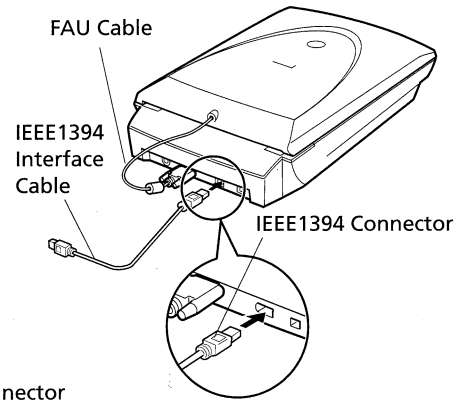

- On a Macintosh, you cannot have the USB cable and the IEEE1394 interface cable connected to the scanner at the same time.
- To use the scanner with an IEEE 1394 (Fire Wire) port on a Macintosh computer, please purchase the IEEE 1394a (Fire Wire 400) cable recommended by Canon.
- Please read the IEEE1394 caution sheet bundled with the scanner for precautions with the IEEE1394 interface and cables recommended by Canon.

3 Attach the supplied AC adapter to the scanner.

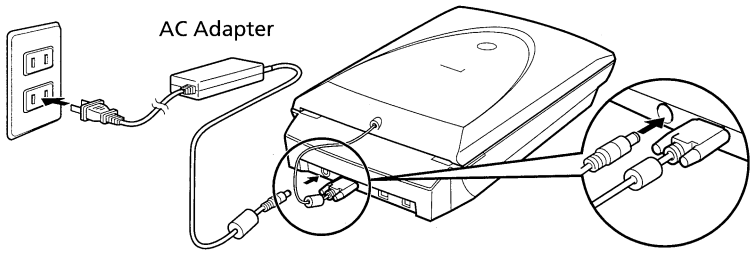

4 Press the power switch on the scanner's front panel to turn the power on.
The Scan Lamp will light.

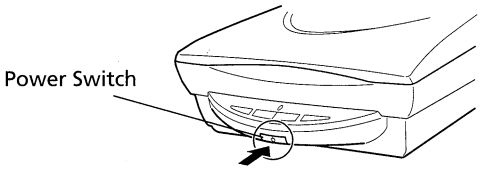

- Only use the USB interface cable and the AC adapter provided with the scanner. Use of other cables or adapters may lead to a malfunction.
- When the scanner is connected to the USB 1.1 port on Windows XP, do not worry if the "HI-SPEED USB Device Plugged into non-HI-SPEED USB Hub" message appears. You can operate the scanner in this condition without problems.

Try Scanning

The following steps explain how to scan with ArcSoft PhotoStudio.

1 Place a photo or a picture on the glass by aligning its top edge with the alignment mark, and close the document cover.

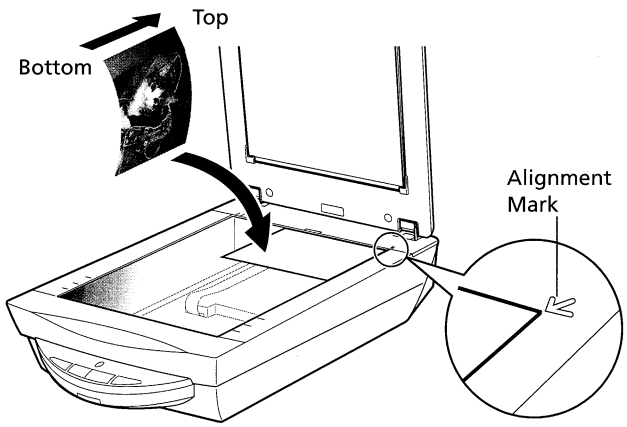

Windows

2 Select [Start], [Programs] or [All Programs], [ArcSoft PhotoStudio 5.5] and [PhotoStudio 5.5].

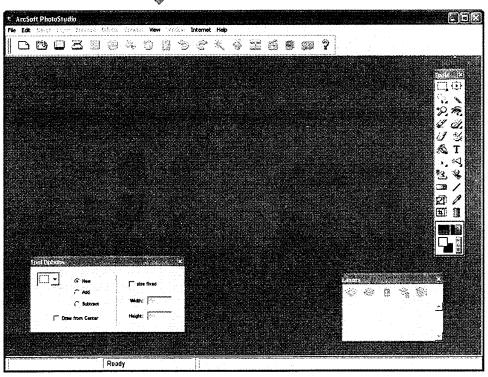

PhotoStudio will start.

Macintosh

2 Double-click the [Applications] folder followed by the [PhotoStudio] folder and the [PhotoStudio] icon.

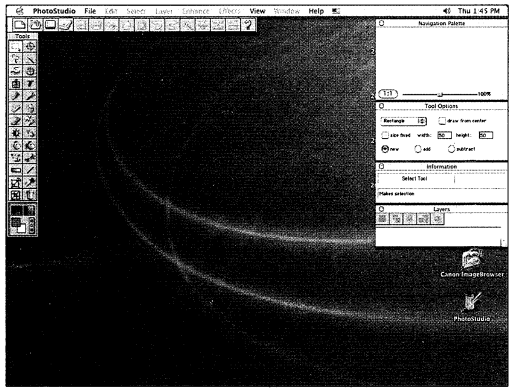

PhotoStudio will start.

3 Click the [File] menu and choose [Select Source].
Select your scanner model name and click the [Select] button for Windows or the [OK] button for Macintosh.

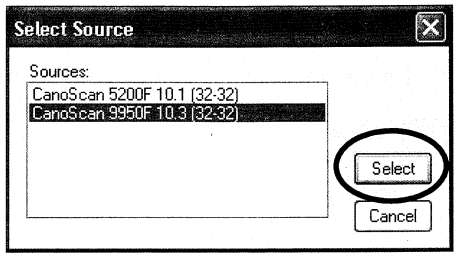

- After the first time, you do not need to adjust this setting from the second time onward with the same scanner.
- You will need to reset it if you select a different scanner or a digital camera.

4 Click the Acquire icon or click the [File] menu and select [Acquire].

ScanGear CS will start.

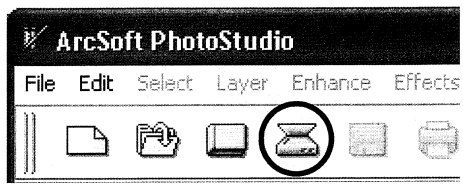

5 Select [Select Source].
You can select from the following options.
Photo (Color)/Magazine (Color)/Newspaper (B&W)/Document (Grayscale).

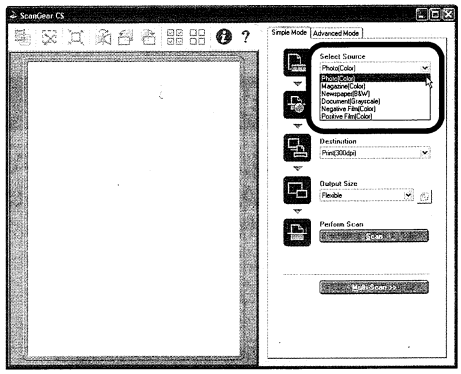

6 Click [Preview].
After calibration, the preview scan will start and gradually display the image.
The image is automatically cropped at its original size.
If you want to trim the image further, drag the mouse diagonally to select the area.

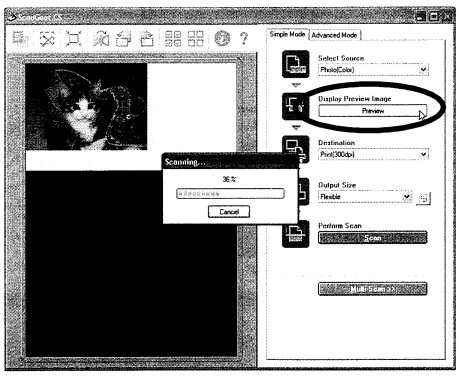

- Do not open the document cover while a scan is in progress.

7 Select the [Destination].
You can select [Print (300 dpi)] or [Image display (150 dpi)].

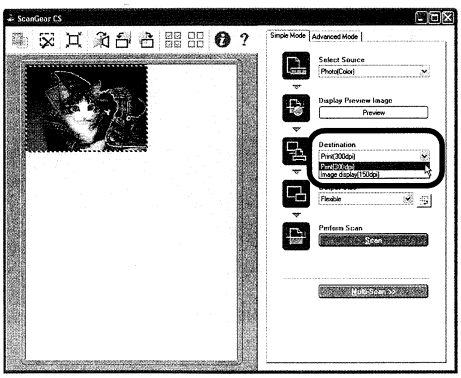

8 Select the [Output Size].

You can select from the following options.

- If you selected [Print (300 dpi)] in Step 7, you can select Flexible, 4"x6", A4, and Letter to match the size of the paper for printing.
- If you selected [Image display (150 dpi)] in Step 7, you can select Flexible, 640 x 480, 800 x 600, 1024 x 768, 1600 x 1200 and 2048 x 1536 to match the sizes used by computer monitors and digital cameras.

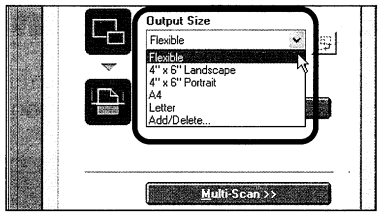

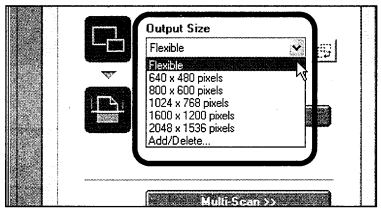

9 Click [Scan].

The final scan will start.

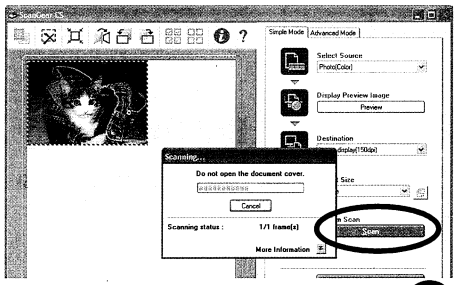

10 Click the close box (Windows) or (Macintosh) in the ScanGear CS window to close it.

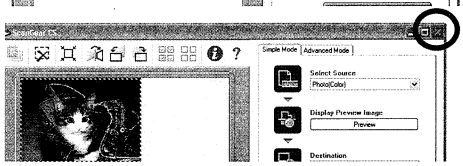

The scanned image will appear in the PhotoStudio window.

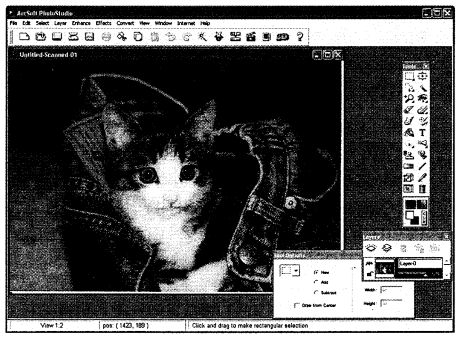

11 Save the scanned image.

Click the [File] menu and select [Save As]. Select the folder where you wish to store the image file, enter a file name, select a file type (JPEG format is recommended) and click [Save].

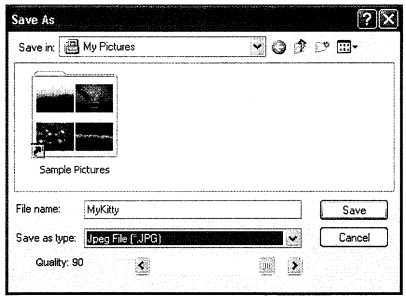

12 Click the close box (Windows) or (Macintosh) in the PhotoStudio window to close it.

- If the scanner does not perform as described above, read the "Troubleshooting" section of the *Scanning Guide* (HTML format manual).
- For details about the bundled software programs, read the *Scanning Guide* or the User Guides (PDF format manuals) for each software program on the CanoScan Setup Utility CD-ROM.

Using the Scanner Buttons

You can use the four convenient buttons on the front of the scanner to scan and perform related tasks easily with a single touch of the button. Place a photo or a picture on the scanner before pressing a button.

• To use these buttons, ScanGear CS, CanoScan Toolbox, ArcSoft PhotoStudio and Presto! PageManager (Windows)/Adobe Acrobat Reader (Macintosh) should be installed from the CanoScan Setup Utility CD-ROM.

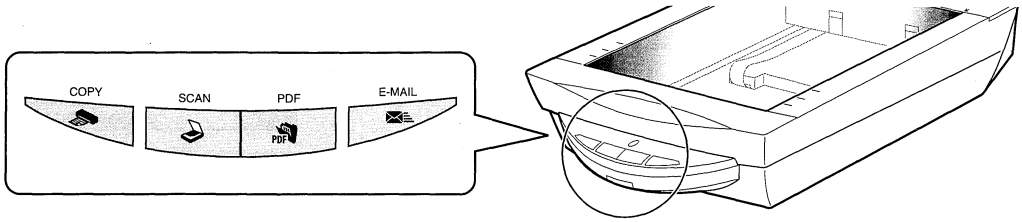

COPY Button

To print (copy) the scanned image with a printer:

1 Press the [COPY] button.
The scanner will scan the item.
The scanned image will print.

- The printer driver should be installed and the printer should be on-line to use this function.

PDF Button

To save the scanned image as a PDF file:

1 Press the [PDF] button.
The scanner will scan the item.
Multiple items can be scanned continuously.
The scanned image will be saved as a PDF document and appear in Presto! PageManager (Windows) or Adobe Acrobat Reader (Macintosh).

A PDF (Portable Document Format) document uses a file format that allows it to be displayed and printed with an application program, such as Adobe Acrobat Reader/ Adobe Reader. It is easy to create PDF files for your images by using the PDF button on the scanner or the PDF button in CanoScan Toolbox.

SCAN Button

To open the scanned image in the PhotoStudio window:

1 Press the [SCAN] button.
The scanner will scan the item.
The scanned image will appear in the PhotoStudio window.

E-MAIL Button

To attach the scanned image to a new e-mail message:

1 Press the [E-MAIL] button.

2 The [E-mail software selection] dialog will appear. Select an option from the list and click [OK].
This step is required only for the first scan.
The e-mail software will start and the scanned image will be attached in a new message window.
The scanner will scan the item.

One of the following e-mail programs should be installed and enabled to use.
For Windows: Microsoft Outlook Express, Microsoft Outlook, Eudora or Netscape Messenger. (Some mail programs are required to set the MAPI function on.)
For Macintosh: Mail (Mac OS X 10.2 or later), Eudora or MS Entourage.

• Please refer to the *Scanning Guide* (HTML format manual) for instructions to change the scanner button settings.

Scanning Film

You can scan 35 mm films (strips or slides), 120 (strips or single frame) and 4"x5" films with this scanner.

Positioning the Film

Use the following procedures to insert the film into the Film Guide.

- Make sure that the FAU Cable is connected to the FAU connector on the back of the scanner.

1 Remove the protective sheet from the document cover.

Press and hold the lever at the top of the protective sheet while you ① pull the sheet outward and ② detach it. Always put the protective sheet when you are not scanning films to protect the light source of the document cover.

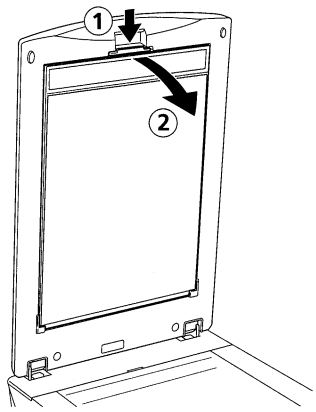

- You can purchase the Accessory Kit for CanoScan 9950F (CSAK-9950F) if the protective sheet or Film Guides are lost or damaged.

2 Set the film and the Film Guide.

- Hold the film by the edges with your fingertips to avoid getting fingerprints or dirt on the film surface.
- Use a blower brush to remove any dust from the film, document glass or light source of the document cover.
- Do not block the calibration slot on the Film Guide when you are scanning film. Colors will not be scanned correctly if the calibration slot is obstructed.

35mm Film Strips

① Open the Film Holder on the Film Guide, place the film face down and close the Film Holder.

② Align the Film Guide's tab with the FILM symbol on the document glass of the scanner.

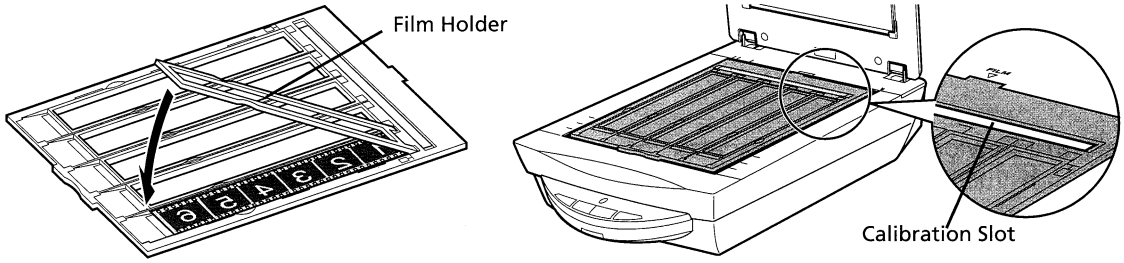

- Place a black piece of paper over any gap to shield the light if you are inserting a film strip with 5 or fewer frames, or if the edge of a scanned image appears whitened.
- Ensure that there is no gap between the edge of the film and the Film Guide on the side near the calibration slot.

35mm Slides

① Align the Film Guide's tab with the FILM symbol on the document glass of the scanner.

② Place a slide or slides face down (correctly viewed from below) in the Film Guide as shown in the diagram to the right.

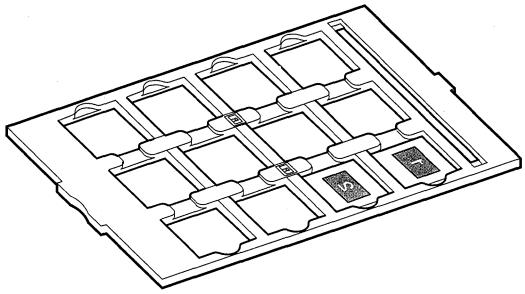

120 Format Film Strips

① Open the Film Holder on the Film Guide, place the film face down and close the Film Holder.

② Align the Film Guide's tab with the FILM symbol on the document glass of the scanner.

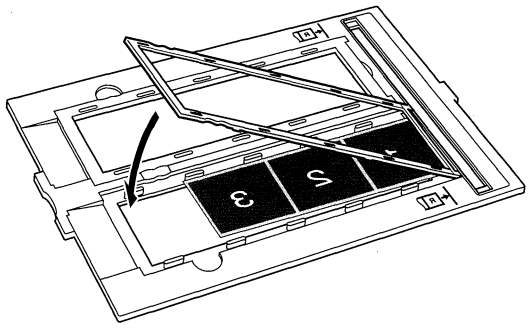

- Leave a gap of 0.2" (5 mm) or greater between film strips when placing two or more on the document glass of the scanner.
- Ensure that there is no gap between the edge of the film and the Film Guide on the side near the calibration slot.

Scanning Curled 120 Format Films

Curled film strips can stick to the document glass of the scanner and cause a pattern of rings called Newton Rings to appear on the scanned image. If this occurs, scan using the supplied film retainer sheet as shown in the figure.

(A) Scan with the film retainer sheet inserted beneath the film.

(B) If Newton Rings still appear after following Instruction (A), turn the film strip over and place it in the Film Holder with the film retainer sheet on top so that the film edges are held down for scanning. Then preview the image in ScanGear CS and click the [Mirror] button to reverse the image before initiating the final scan.

(A)

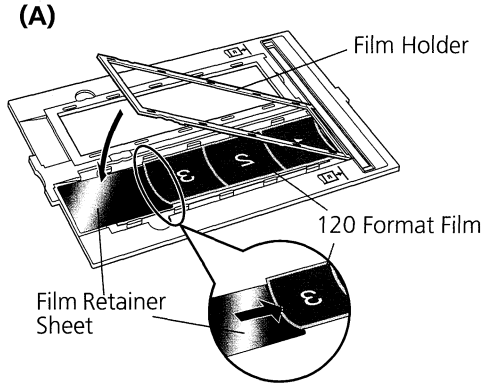

With its glossy side facing upward, slip the film retainer sheet under the film.

(B)

Hold the film edges down by placing the film retainer sheet on top with its glossy side facing downward.

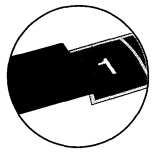

To avoid damaging the film, always place the glossy side (the side without an illustration) of the film retainer sheet against the film.

4" x 5" Format Film

① Open the Film Holder on the Film Guide, place the film face down and close the Film Holder.

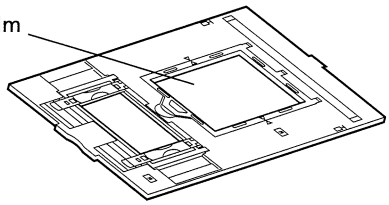

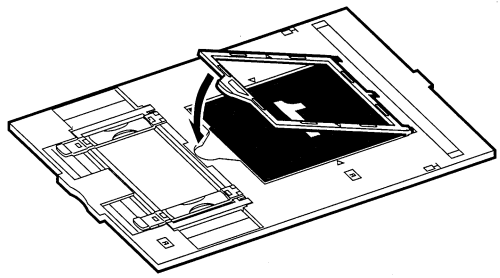

② Align the Film Guide's tab with the FILM symbol on the document glass of the scanner.

120 Format Film (Single Frame)

Use this method to scan single frames.

① Adjust the Film Holder bars to the film width.

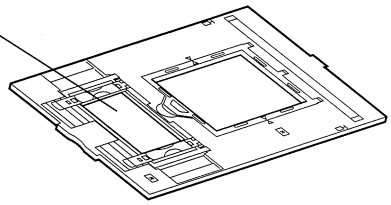

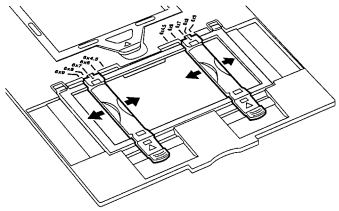

② Open the Film Holder.

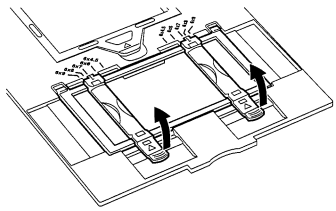

③ Place the film face down (viewed correctly from below) in the Film Guide so that its edges fit within the grooves.

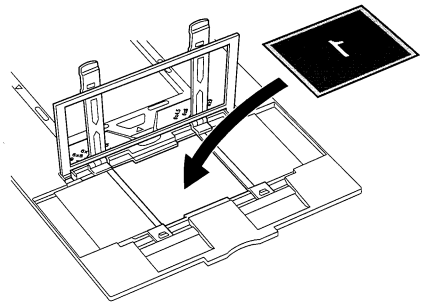

To avoid scratching the film, do not slide the Film Holder after you place the film in the Film Guide.

④ Close the Film Holder.

⑤ Align the Film Guide's tab with the FILM symbol on the document glass of the scanner.

If the Film Holder becomes separated from the Film Guide, refer to the illustrations to reassemble it

1. Insert (a) into the slots in the Film Guide.
2. Insert (b) securely into the Film Holders.
3. Close the Film Holder (c).

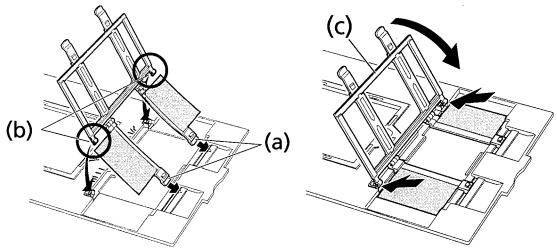

3 Close the document cover.

Scanning Film

The following steps explain how to scan 35 mm film strips with ArcSoft PhotoStudio. Use ScanGear CS's Advanced Mode to scan 120 or 4" x 5" format films.

1 **Start ArcSoft PhotoStudio.**
Refer to step 2 on page 7.

2 **Start ScanGear CS.**
Refer to step 4 on page 8.

3 **Select the [Select Source].**
You can select from the following options for films.
Negative Film (Color) / Positive Film (Color)

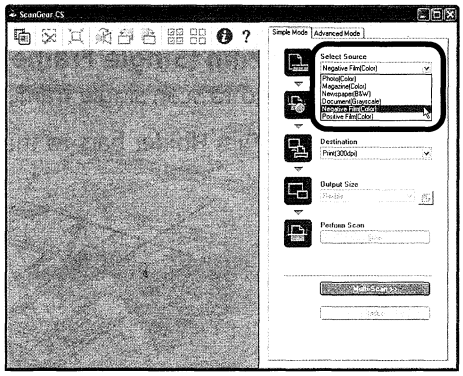

4 **Click [Preview].**
ScanGear CS will display the preview image(s).

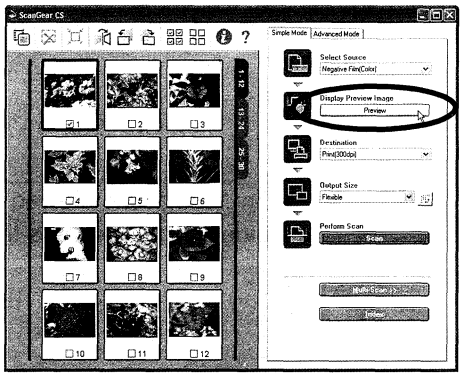

5 **Place a check mark beside the number(s) of the frame(s) to be scanned.**
By default, a check mark appears beside the first frame only. You can scan multiple frames in one step if you place a check mark beside the number of each frame you wish to include.

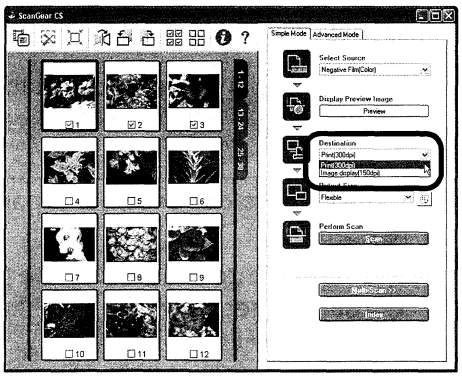

6 **Select the [Destination].**
You can select [Print (300 dpi)] or [Image display (150 dpi)].

7 Select the [Output Size].

You can select from the following options.

- If you selected [Print (300 dpi)] in Step 6, you can select Flexible, 4"x6", A4, and Letter to match the size of the paper for printing.
- If you selected [Image display (150 dpi)] in Step 6, you can select Flexible, 640 x 480, 800 x 600, 1024 x 768, 1600 x 1200 and 2048 x 1536 to match the sizes used by computer monitors and digital cameras.

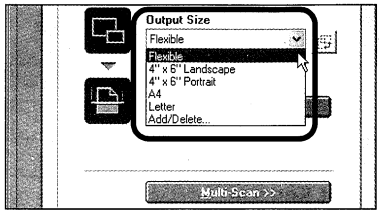

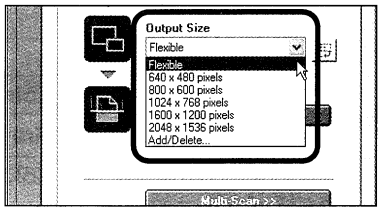

8 Click [Scan].

The final scan will start.

If you have failed scanning with ArcSoft PhotoStudio, scan fewer frames or use CanoScan Toolbox/Adobe Photoshop Elements as the parent application program, and rescan.
See Troubleshooting in the *Scanning Guide*.

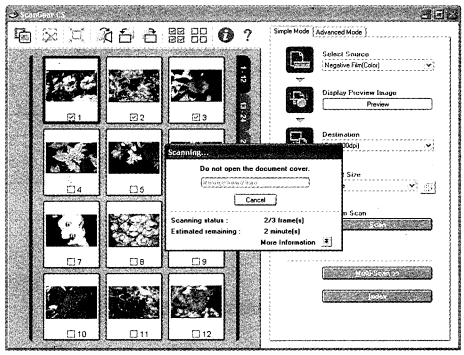

When the scan is complete, click the ScanGear CS close box ☒ (Windows) or ● (Macintosh).



The scanned image will appear in ArcSoft PhotoStudio.

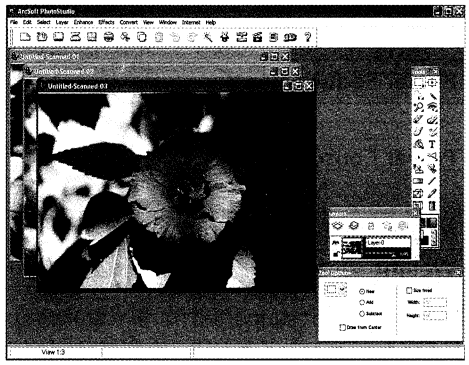

9 Save the scanned image.

Click the [File] menu and select [Save As]. Select the folder where you wish to store the image file, enter a file name, select a file type (JPEG format is recommended) and click [Save].

10 Click close box ☒ (Windows) or ● (Macintosh) in the PhotoStudio window to close it.

- If the scanner does not perform as described above, read the "Troubleshooting" section of the *Scanning Guide* (HTML format manual).
- For details about the bundled software programs, read the *Scanning Guide* or the User Guides (PDF format manuals) for each software program on the CanoScan Setup Utility CD-ROM.

Specifications

		CanoScan 9950F
Scanner Type		Flatbed
Scanning Element		CCD 6-line color
Light Source		Cold cathode fluorescent lamp
Optical Resolution		4800 x 9600 dpi
Selectable Resolution		25 - 19200 dpi (ScanGear CS)
Scanning Bit Depth	**Color**	16 bit input / 16 bit or 8 bit output for each color (RGB)
	Grayscale	16 bit input / 16 bit*1 or 8 bit output
Scanning Speed*2 (Photo or Document)	**Color**	11.0 msec./line (2400 dpi), 11.0 msec./line (4800 dpi)
	Grayscale,B&W	11.0 msec./line (2400 dpi), 11.0 msec./line (4800 dpi)
Scanning Speed*2 (Film)	**Color, GrayScale, B&W**	5.5 - 88.0 msec./line
Preview Speed*3		Approximately 3.6 seconds
Interface		USB 2.0 Hi-Speed*4 / USB (USB 1.1 equivalent) IEEE1394a (FireWire400 : Macintosh only)
Maximum Document Size		A4/Letter: 216 x 297 mm (8.5 x 11.7 in.)
Film Type (negatives/positives)		35 mm strip 30 frames
		35 mm slide 12 frames
		120 format (max. 6 x 22 cm) 2 strips 120 format (max. 6 x 9 cm) 1 frame
		4"x 5" format
Scanner Buttons		4 buttons: COPY, SCAN, PDF, E-MAIL
Operating Range	**Temperature**	10°C to 35°C (50°F to 95°F)
	Humidity	10% to 90% RH, 20% to 80% RH when scanning film (without condensation formation)
Power Requirements		AC adapter (100/120/230/240 V)*5
Power Consumption		In operation: 28 watts maximum Stand-by: 6 watts Power Switch Off: 0.1 watts (100V), 0.3 watts (200V) (Using supplied AC adapter)
Maximum Exterior Dimensions		290 x 509 x 128 mm (11.4 x 20 x 5 in.)
Weight		Approximately 5.8 kg (12.8 lbs.)

*1 16 bit output supported for film scanning only.

*2 The fastest speed in USB 2.0 Hi-Speed mode on Windows PC. Transfer time to computer is not included.

*3 Calibration processing time is not included.

*4 Note that Macintosh computers with USB 2.0 Hi-Speed interface expansion cards are not supported.

*5 AC adapter type varies according to the region in which the scanner is purchased.

- Specifications are subject to change without notice.

Upgrading to USB 2.0 (Windows Only)

To upgrade a computer to the USB 2.0 standard, please use one the following USB expansion cards/hubs that have been verified by Canon for compatibility.

Expansion Cards
- Adaptec USB2connect 5100: PCI bus
- Adaptec USB2connect 3100LP: PCI bus
- Adaptec USB2connect 2000LP: PCI bus
- Adaptec DuoConnect: PCI bus

Hubs
Adaptec XHUB4
Adaptec XHUB4PLUS
Adaptec XHUB7PLUS

For installation procedures, please read the instructions that accompany the USB expansion card/hub.

System Information

This form should be used to record the operating environment for the purchased scanner.
If any problems occur with the scanner, you will need this information when you contact our Customer Support Help Desk. Be sure to record the information and store it in a safe location.

- This information is also required to request a repair under warranty. Make sure you record the information and store it in a safe location.
- Guaranteed servicing for this equipment will expire five years after production ceases.

Date of Purchase:

Dealer Name/Dealer Tel:

Dealer Address:

Scanner Model: CanoScan 9950F

Serial Number (on the back of the equipment):

• About the Computer Used

Manufacturer:	Model:
CPU:	Clock Speed: MHz
Memory Capacity (RAM): MB	
Hard Disk Capacity: MB	Space Available: MB
OS: Windows ☐ XP ☐ Me ☐ 2000 ☐ 98	
Macintosh ☐OS X v10.1 ☐OS X v10.2 ☐OS X v10.3	
Monitor Type:	Monitor Size: inches
Printer:	Manufacturer:
Type of Printer:	Printer Resolutions:
Installed Virus Protection Program:	
Installed Compression Program:	
On-Board Expansion Cards:	
Attached Peripherals:	
Connected Network System:	

• After upgrading to Windows XP, reinstall ScanGear CS and CanoScan Toolbox according to the steps on page 3.

CANON INC.
30-2, Shimomaruko 3-chome, Ohta-ku Tokyo 146-8501, Japan

CANON U.S.A., INC.
One Canon Plaza, Lake Success, New York 11042, U.S.A.
Customer Care Center: 1-757-413-2848
http://www.usa.canon.com/consumer

CANON CANADA INC.
6390 Dixie Road, Mississauga, Ontario L5T 1P7, Canada 1-800-OK CANON
http://www.canon.ca

CANON LATIN AMERICA, INC.
703 Waterford Way, Suite 400 Miami, Florida 33126, U.S.A.

CANON MEXICANA, S. de R.L. de C.V.
Anillo Periferico Sur No. 4124, Torre Zafiro (II) Colonia Ex-Rancho de Anzaldo,
Piso 5 y 6, Mexico D.F.
Tel. (525) 5490-2000

CANON PANAMA, S.A.
Apartado 7022, Panama 5, Rep. de Panama
Tel. (507) 279-8900

CANON CHILE, S.A.
Ave. Manquehue Norte #1337, Piso 3, Casilla 187-9 Santiago, Chile
Tel. (562) 366-6600

CANON ARGENTINA, S.A.
Ave. Corrientes 420 (1043) Buenos Aires, Argentina
Tel. (5411) 432-59800

CANON EUROPA N.V.
P.O. Box 2262 1180 EG Amstelveen, The Netherlands

CANON (UK) LTD.
Woodhatch, Reigate, Surrey RH2 8BF, United Kingdom
For technical support, please contact Canon Help Desk.
P.O. Box 431, Wallington, Surrey SM6 0XU, UK
Tel: (08705) 143 723 (Calls may be recorded)
Fax: (08705) 143 340
For sales enquiries, please call 08705 143723

CANON COMMUNICATION & IMAGE FRANCE S.A.
102 Avenue du Général de Gaulle
92257 LA GARENNE COLOMBES CEDEX, France
Tél: 01.41.30.15.15 Fax: 01.41.30.15.05
E-mail:hot_line@cf.canon.fr
http://www.canon.fr

CANON DEUTSCHLAND GmbH
Europark Fichtenhain A10, 47807 Krefeld, Germany
Technischer Support
Telefax: 0810 / 500 60 22 (0.12€/Min.)
http://www.canon.de

CANON ITALIA S.P.A
Via Milano 8, I-20097 San Donato Milanese (MI) Italy
Tel: 02/8248.1 Fax: 02/8248.4604
Pronto Canon: 02/8249.2000
http://www.canon.it

CANON NEDERLAND N.V.
Neptunusstraat 1, 2132 JA Hoofddorp, The Netherlands
Tel: 023-5 670 123 Fax: 023-5 670 124
Helpdesk: 023-5 681 681
http://www.canon.nl

CANON BELGIUM N.V./S.A.
Bessenveldstraat 7, B-1831 Diegem, Belgium
Tel: 02 7220411 Fax: 02 7213274
Helpdesk: 090010627
http://www.canon.be

CANON LUXEMBOURG S.A.
Rue des Joncs 21, L-1818 Howald, Luxembourg
Tel.: (352) 48 47 961 Fax: (352) 48 47 96232
Helpdesk: 900 74100
http://www.canon.lu

CANON Ges.m.b.H.
Zetschegasse 11, 1230 Wien, Austria
Tel.: (01) 680 88-412 Fax: (01) 680 88-413
http://www.canon.at

CANON CEE GMBH
Oberlaaerstr. 233, A-1100 Wien, Austria
Tel: +43 1 680 88-331 Fax: +43 1 680 88-333

CANON (SCHWEIZ) AG
Product Support CCI Industriestrasse 12, 8305 Dietlikon, Switzerland
Fax: 0041 (0) 1 835 68 59
Hotline: 0900 57 55 20 (Fr.2.13/min)
http://www.canon.ch

CANON ESPAÑA S.A.
C/Joaquin Costa, 41-28002, Madrid, Spain
Tel.: 91-538 4500 Fax.: 91-411 4176
Tel: Atención al cliente: 901.301.301
Help Desk: 906.301255
E-mail:helpdesk@btlink.net

CANON DANMARK A/S
1. Kund Højgaards Vej1, DK-2860 Søborg, Denmark
Hotline: +45 44 88 25 91
Forhandlerhenvisning:
http://www.canon.dk

CANON NORGE as
Hallagerbakken 110, Postboks 33, Holmlia, 1210 Oslo, Norway
Tlf: 2262 9321 Faks: 2262 0615
http://www.canon.no

CANON SVENSKA AB
Gustav III:s Boulevard 26, S-169 88 Solna, Sweden
Support-Under garantitiden: Tel. 08-744 86 20
Support-Efter garantitiden: Tel. 0900-20 30 555
E-post support: anvandar.klubben@canon.se
http://www.canon.se

CANON OY
Huopalahdentie 24, P.O. Box 1, FIN-00351 Helsinki, Finland
Puhelin: 010 54420 Fax: 010 544 4571
Helpdesk: 020 366 466 (pvm)
Internet: www.canon.fi

CANON NORTH-EAST OY
Huopalahdentie 24, P.O. Box 46, FIN-00351 Helsinki, Finland
Tel. +358 10 544 20 Fax +358 10 544 10
http://www.canon.ru
http://www.canon.ee
http://www.canon.lv
http://www.canon.lt

COPICANOLA SA
Rua Alfredo da Silva, 14, 2721-862 Alfragide, Portugal
Tel: 21 471 11 11 Fax: 21 471 09 89
www.copicanola.pt
info@copicanola.pt

CANON SINGAPORE PTE. LTD.
1 HarbourFront Avenue #04-01
Keppel Bay Tower Singapore 098632
Hotline: 65-6799-8688
Tel: 65-6799-8888 Fax: 65-6273-6786
http://www.canon.com.sg

CANON MARKETING (MALAYSIA) SDN. BHD.
Block D, Peremba Square
Saujana Resort, Section, 40150 Shah Alam, Selangor Darul Ehsan
Malaysia
Tel: 603-7844-6000, Fax: 603-7844-6048
Helpdesk: 603-7844-6008/9
Enquiry: print&scan@canon.com.my
http://www.canon.com.my

CANON MARKETING (THAILAND) CO. LTD.
179/34-45 Bangkok City Tower, 9th-10th Floor
South Sathorn Road, Thungmahamek
Sathorn, Bangkok 10120, Thailand
Tel: 662-3449999, Fax: 662-3449968
http://www.canon.co.th

CANON MARKETING (PHILIPPINES) INC.
Marvin Plaza Building, 2153 Don Chino Roces Ave,
Makati City, Metro Manila, Philippines
Tel: 632-8126047, Fax: 632-8120067/8109797

CANON INDIA PVT. LTD.
Neela Gagan, Mandi Road, Mehrauli, New Delhi-110030
Tel: 91-11-26806572/73/74, 91- 11-26807317/18/19
Fax: 91-11-26807180
http://www.canon.co.in

CANON HONGKONG CO., LTD.
9/F, The Hong Kong Club Building 3A, Chater Road, Central, Hong Kong
TEL: (852) 2739 0802 FAX: (852) 2739 6428

CANON AUSTRALIA PTY. LTD.
1 Thomas Holt Drive, North Ryde, Sydney N.S.W. 2113, Australia
Info-Line: (02) 9805 2864

CANON NEW ZEALAND LTD.
Akoranga Business Park, Akoranga Drive, Northcote Auckland, New Zealand
Info-Line: (09)489 0470

©CANON INC. 2004
PRINTED IN CHINA

Please send correspondence to:
Canon U.S.A., Inc.
15955 Alton Parkway
Irvine, CA 92618-3731

NO POSTAGE
NECESSARY
IF MAILED
IN THE
UNITED STATES

BUSINESS REPLY MAIL
FIRST-CLASS MAIL PERMIT NO. 10331 SALT LAKE CITY UT

POSTAGE WILL BE PAID BY ADDRESSEE

CANON USA INC
DEPT CanoScan® 9950F
PO BOX 30403
SALT LAKE CITY UT 84130-9776

Fold Here

Canon

CanoScan®
9950F
Color Image
Scanner

Registration Card

Congratulations on purchasing a CanoScan 9950F Color Image Scanner. Register now to receive information about other Canon products and promotions that may be of interest to you.

3

easy ways to register:

1. Visit our Web site at **www.registercanon.com**
2. Mail in this card
3. Fax this card to **1-800-567-3229**

Please be sure to register using only 1 of the 3 easy methods.

Product registration valid only in the U.S.A.

Canon CanoScan® 9950F Color Image Scanner Registration Card

Thank you for purchasing a CanoScan 9950F Color Image Scanner. To help us serve you better, complete and return this Registration Card. Simply fill out the following questions and mail this card or fax it to 1-800-567-3229. *Note: The toll-free number is for Registration Cards only. No operator will answer this number.*

V1CS9950F051004

1 ☐ Mr. ☐ Ms.

First Name | Initial | Last Name

Company Name

Mailing Address | Apt. No./Suite

City | State | Zip

Home Phone w/Area Code

Business Phone w/Area Code | Business Phone Extension

E-Mail Address

Fold Here

2 Where did you purchase this scanner?

Name of Store

3 Date of purchase: Month ___ Day ___ Year ___

4 Serial number (found on the bottom of scanner):

5 Which operating system are you using with your PC?

☐ Windows® XP ☐ Windows 2000 ☐ Mac® OS X v 10.1.3 to 10.3.x
☐ Windows Me ☐ Windows 98 ☐ Other

6 Did you purchase a PC at the SAME TIME you purchased this scanner?

☐ Yes ☐ No

7 Where will this scanner be primarily used? Check ONE only:

☐ Home business
☐ Small business (outside of home)
☐ Home (personal/family/creative)
☐ Home (work brought from office)
☐ Corporate office
☐ Government/Military/Law enforcement
☐ Educational institution

8 ☐ On occasion, Canon U.S.A., Inc. may want to send you information about other Canon products and promotions that may be of interest to you. Please check this box if you **do not** want to receive this information.

The following questions are strictly optional and will only be used by Canon.

9 ☐ Male ☐ Female

10 Age ☐ Under 18 ☐ 18 to 24 ☐ 25 to 34 ☐ 35 to 44 ☐ 45 to 54 ☐ 55 to 64 ☐ 65 or older

11 Annual Income

☐ $15,000 to $30,000
☐ $30,001 to $50,000
☐ $50,001 to $75,000
☐ $75,001 to $150,000
☐ $150,000 +

V1CS9950F051004

©2004 Canon U.S.A., Inc. Canon and CanoScan are registered trademarks of Canon Inc. All other product and brand names are trademarks of their respective owners.

S-CS9950F-REG-0504
Printed in China

Please tape closed. DO NOT STAPLE.

English

Safety Precautions

Please read and take note of the following precautions before using the equipment.

⚠ WARNING

Indicates a warning concerning operations that may lead to death or injury to persons if not performed correctly. In order to use the equipment safely, always pay attention to these warnings.

⚠ CAUTION

Indicates a caution concerning operations that may lead to injury to persons or damage to property if not performed correctly. In order to use the equipment safely, always pay attention to these cautions.

About Locations

⚠ WARNING

- Do not place the equipment near flammable liquids such as alcohol or thinners. If the internal electrical parts come in contact with flammable liquids, fire or electrical shock may result.
- Do not place the following objects on top of the equipment. If the internal electrical parts come in contact with these objects, fire or electrical shock may result.
  - metallic objects, such as necklaces
  - containers with liquid, such as cups, vases or flower pots

If any of these objects or liquids enter the equipment, immediately unplug the AC adapter and contact your retailer or Canon Customer Support Help Desk.

⚠ CAUTION

- Do not place the equipment in the following areas. Fire or electrical shock may result.
  - Areas with high humidity
  - Areas subject to direct sunlight
  - Areas with high temperatures
  - Areas near sources of flame
- Do not place the equipment on shaky stands, unstable surfaces or surfaces subject to frequent vibrations. If the equipment falls, it may cause injuries.
- Do not place heavy objects on the equipment. Objects may fall and cause injuries.

About the Power Supply

⚠ WARNING

- Do not damage, mutilate or modify the AC adapter. Do not place heavy objects on, pull or excessively bend the cord of the AC adapter. Damaged wires may cause fire or electrical shock.
- Do not plug in/unplug the AC adapter with wet hands. Fire or electrical shock may result.
- Do not connect excessive numbers of plugs into one electrical outlet. Fire or electrical shock may result.
- Do not twist or tie the AC adapter together. Fire or electrical shock may result.
- Always plug the AC adapter in all the way. If it is not plugged in completely, fire or electrical shock may result.
- Do not use AC adapters other than the one supplied. Fire or electrical shock may result.
- As a rule, do not use electrical extension cords. Fire or electrical shock may result. If the use of an extension cord is necessary, do not use one longer than 5 m (15 feet). Make sure that the extension cord is not twisted, and that the AC adapter is fully plugged into the extension cord. Do not use multiple extension cords.
- Do not use extension cords in corridors or other high traffic areas where they can be stepped on or tripped over. This could damage the cords and result in fire or electrical shock.
- Do not use the AC adapter outdoors or in exposed areas.

⚠ CAUTION

- Do not plug the equipment into outlets with voltages other than the specified voltages. Incorrect voltages may result in fire or electrical shock.
- When unplugging the AC adapter, always pull on the main body. Pulling on the cord may damage the wires and lead to fire or electrical shock.
- Do not place objects around the AC adapter in case it needs to be unplugged during emergencies.
- Unplug the AC adapter from the outlet at least once a year and clean the area around the base of the AC adapter's metal pins to ensure that all dust is removed. If dust accumulates in this area, it may result in fire.

General Handling Precautions

⚠ WARNING

- Do not take apart or modify the equipment. Fire or electrical shock may result from improper handling of its components.
- If you hear unusual noises, see smoke, feel excessive heat or smell anything unusual, immediately unplug the AC adapter and contact your retailer or Canon Customer Support Help Desk. Continued use of the equipment may result in fires or electrical shock.
- Do not use flammable sprays near this equipment. Also do not spill water, liquids, or flammable liquids on the equipment. If these fluids enter this equipment and contact the electrical parts, fire or electrical shock may result. If anything enters the equipment, immediately unplug the AC adapter and contact your retailer or Canon Customer Support Help Desk.
- When cleaning the equipment, always unplug the AC adapter. Otherwise, fire or electrical shock may result.
- When cleaning the equipment, use a water-moistened cloth that is well wrung out. Do not use flammable liquids, such as alcohol, benzene or thinners. If a flammable liquid enters the inner electrical parts, fire or electrical shock may result.

⚠ CAUTION

- Carefully close the document cover in order not to pinch your hands.
- Do not press heavily on the document glass or the document cover. The document glass may break and injure you.
- Do not bump the document glass or drop heavy books or objects on it. The document glass may break and injure you.
- When not in use for extended periods, such as long weekends, unplug the AC adapter for safety.
- When transporting the equipment, be extremely careful. Dropping it could cause an injury.
- Wait until the equipment has cooled before placing a cover over it. Otherwise fire may result.
- Do not use the supplied CD-ROM in regular CD players. It produces excessively loud sound that may cause hearing damage.

Setup and Operating Conditions

- Do not set up in areas where there are excessive fluctuations in temperature. Also do not move the equipment from low-temperature areas to high-temperature areas. Condensation may cause image errors. Leave the scanner enough time to gradually adapt to the new conditions before use.
- Do not use the equipment in areas subject to direct sunlight or strong room light. It may cause damage to the equipment or decrease image quality. If you have to use the scanner in direct sunlight, make sure to use a thick curtain to block the light.

© 2002 CANON INC.
PRINTED IN CHINA

CanoScan 9950F

High Resolution Scanning Tips

Scanning Performance

The CanoScan 9950F supports high resolution scanning at up to 4800 x 9600 dpi and 48 bit input/output color depth.

- File sizes of images scanned at high resolutions and high color depth can be large. Using 24 bit color depth and reducing the resolution will reduce file sizes and improve scanning speed. Resolution and color depth can be adjusted in the provided ScanGear CS scanner driver.
- The ScanGear CS scanner driver uses an industry common communications protocol called TWAIN. The ScanGear CS driver will not allow scans that exceed the TWAIN 10,000 x 30,000 pixel limitation at 48 bit color depth. Scanning of large images or 4" x 5" film may require reducing the scale, reducing the resolution or adjusting to a smaller scanning area when scanning.

Film and Slide Scanning

By using the provided film guides, the CanoScan 9950F can scan 35mm filmstrips, 35mm slides, 120 roll film and 4" x 5" film.

- Scanning of multiple slides simultaneously, especially at high resolutions and high color depth, can quickly consume large amounts of disk storage. In some instances, improved system performance will occur when:

    1. Reducing the number of slides that are scanned
    2. Reducing resolution of the scans
    3. Reducing the color depth of the scans

Note (Mac Users Only): The Mac version of ArcSoft PhotoStudio limits the number of frames that can be scanned simultaneously when scanning at 48 bit color depth:

Output Resolution [1]	Maximum number of Frames that Can be Scanned
1200dpi	24 frames
2400dpi	6 frames
4800dpi	1 frame

[1] When scale is set to 100%.

Adobe® Photoshop® Elements 2.0 is recommended for multiple frame scanning.

© 2004 Canon Inc. CanoScan is a trademark of Canon, Inc. All other product or brand names are trademarks of their respective owners.

I-IE-102A

PRINTED IN CHINA

Using Adobe® Photoshop® Elements

The Adobe Photoshop Elements CD-ROM contains the Adobe Photoshop Elements software, its PDF manual, and so on.
Adobe Photoshop Elements is a photo retouching software, having high level functions that can adjust and edit images scanned by the scanner.

Installation

1. Insert the Adobe Photoshop Elements CD-ROM into the CD-ROM drive of your computer.

- **Windows**
  ① "Welcome" window will appear. Click [Next].
  ② You are asked with what language you will view the licence agreement. Select one from the list, and click [Next].
  ③ [End User License Agreement] is confirmed. Click [Accept].
  ④ Confirm that [Installation] is activated, and click [Adobe Photoshop Elements 2.0].
- **Macintosh** Double-click the CD-ROM icon on the desktop, followed by the language folder, the [Install Photoshop Elements] icon in succession.

2. In the series of dialogs and windows, select or enter the appropriate settings, and click [Next] or [Yes] (with Macintosh, [Continue], [Next] or [Install]).

With Macintosh, when a verification dialog appears, input the Administrator's name and password, and click [OK].
In the [User Information] dialog, you must enter the "Serial Number". The serial number is shown on the Photoshop Elements CD-ROM case. Enter the 6 sets of 4 digits without hyphens.

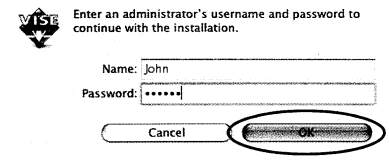

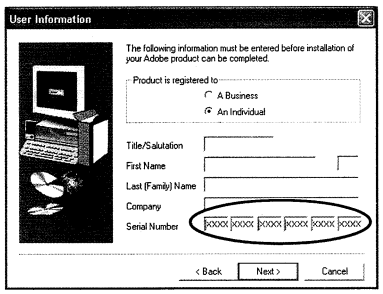

3. Finally, when "Setup is complete" (Windows) or "Installation was successful" (Macintosh) will appears, click [Finish] (Windows) or [Quit] (Macintosh).

* For details, see the "How_to_Install Read Me (Windows)/ How to Install Read Me (Macintosh)" file in the CD-ROM.

Starting Adobe Photoshop Elements

• Windows

Select [Start] - [(All) Programs] - [Adobe Photoshop Elements 2.0].

Adobe Photoshop Elements will start.

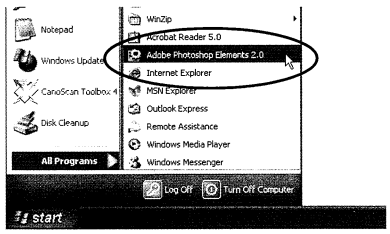

• Macintosh

Double-click the Adobe Photoshop Elements 2.0 icon in the [Adobe Photoshop Elements 2] folder.

[Adobe Photoshop Elements 2] folder is found in the [Applications] folder with Mac OS X.

Adobe Photoshop Elements will start.

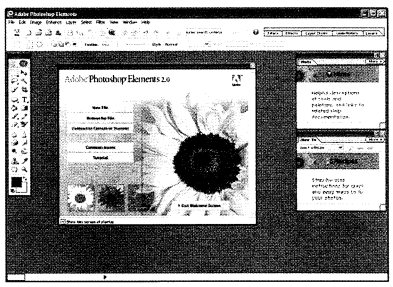

Starting the Scanner Driver

Select the name of your scanner with [Import] from the [File] menu.

ScanGear CS will start.

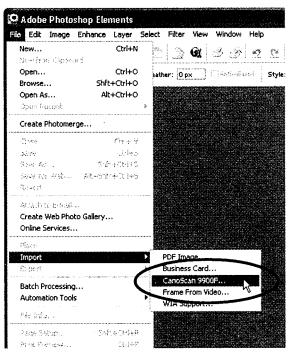

Refer to the PDF manuals in the Adobe Photoshop Elements CD-ROM regarding how to use the software.

© CANON INC. 2004
PRINTED IN CHINA

How to use Adobe® Photoshop® Album™ 2.0 Starter Edition and purchase Adobe® Photoshop® Album™

Adobe® Photoshop® Album™ Starter Edition is a tryout version with limited functions of the product version. You can upgrade to the product version for a small price.

1. System Requirements

- Intel® Pentium® II or faster processor
- Microsoft® Windows® Millennium Edition, Windows 2000, or Windows XP
- Microsoft Internet Explorer 5.0.1 (with Service Pack 2), 5.5, or 6.0 (updated with applicable service packs)
- Microsoft DirectX 8.1 or 9.0 software / QuickTime 6.3 software

2. Limitations

The image editing functions and search functions such as Organize Photo, Fix Photo, Find Photo, Create, have limited functions. The product version gives full control of these functions.

Note

Use this software to display the images saved in the computer.
This Software does not suit scanning with ScanGear CS or CanoScan Toolbox.

3. How to Install Adobe Photoshop Album Starter Edition

[Notice] If another version of Adobe® Photoshop® Album is already installed, follow the message prompts to install.

1. Place the CanoScan Setup Utility CD-ROM in the drive and click [Display the CD-ROM Contents] when the main window appears.
2. Click [Canoscan] to display the CD-ROM contents.
3. Open the [Palbum] folder then select [PhotoshopAlbumSE] folder.
4. Click the [Setup.exe] icon. Installation will start. Follow the on-screen instructions to proceed.

Enter the required items in the User Registration window.

4. How to Purchase the product version of Adobe Photoshop Album

Click [Help] and [Upgrade to Photoshop Album] to purchase the product version.

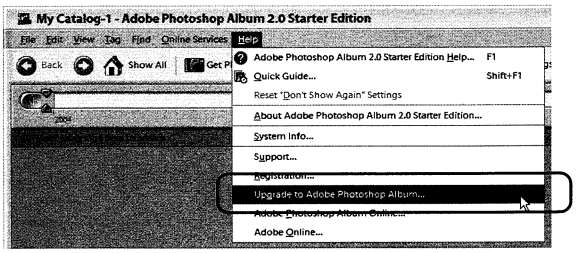
My Catalog-1 - Adobe Photoshop Album 2.0 Starter Edition
File Edit View Tag Find Online Services Help
Back
Show All
Adobe Photoshop Album 2.0 Starter Edition Help... F1
Quick Guide... Shift+F1
Reset "Don't Show Again" Settings
About Adobe Photoshop Album 2.0 Starter Edition...
System Info...
Support...
Upgrade to Adobe Photoshop Album...
Adobe Online...

5. Photoshop Album Starter Edition Technical Support

Canon Inc. does not provide technical support for this software. Users of Adobe Photoshop Album Starter Edition are not eligible for free person-to-person or fee based support by phone. You can access Adobe Systems Incorporated online technical support resources for free technical information:

— http://www.adobe.com/support/main.html

I-IE-096A CANON INC. 2004 PRINTED IN CHINA

About Canon Scanner WIA Driver for Windows® XP and CanoScan Series Color Image Scanners

Canon Scanner WIA Driver is the scanner device driver specific to Windows XP for the following CanoScan series color image scanners. It can be used as a standalone program or with WIA/TWAIN-compliant application programs.
Note that it does not support film scanning if the scanner is equipped with a film adapter unit.

IMPORTANT

- *Canon Scanner WIA Driver supports very simple features required for scanning. You are recommended to use the ScanGear CS scanner driver instead of the WIA Driver for full scanning features. ScanGear CS offers more features and can be used to adjust scanned images.*
- *You cannot install and use WIA Driver and ScanGear CS on the same computer.*
- *Log on with a user name which is set to an Administrator before installing or uninstalling software.*
- *Be sure to read the precautions listed in the Readme file on the CD-ROM before installing the WIA Driver.**
- *Please see the Canon Scanner WIA Driver User's Guide contained on the CD-ROM for operating instructions.**

* *View the Readme and Canon Scanner WIA Driver User's Guide files by following the procedure below.*

1 *Place the CanoScan Setup Utility CD-ROM in the drive.*
2 *Click [Display the CD-ROM Contents].*
3 ***Readme text:*** *Click the [CanoScan] icon. Open the [WIA] folder and double-click [README].*
User's Guide: *Click the [Manual] icon and double-click [WIA120].*

Installing the WIA Driver

IMPORTANT

- *If ScanGear CS has already been installed, delete ScanGear CS using the uninstallation procedure below before proceeding with the installation.*
- *When installing the WIA Driver, be sure to have the scanner detached from the computer.*

1. Turn off the computer and detach the scanner from the computer.
2. Turn on the computer and place the CanoScan Setup Utility CD-ROM in the drive.
3. Click [Display the CD-ROM Contents] in the CanoScan Setup Utility Menu window.
4. Click the [CanoScan] icon in the [Display the CD-ROM Contents] window.
5. Open the [WIA] folder and double-click the [SETUPWIA] icon.
   - This will start the WIA Driver installation. When [Canon WIA Driver setup completes] message appears, installation is complete.
6. Click [OK].
7. Remove the CanoScan Setup Utility CD-ROM from the drive.
8. Attach the scanner to the computer.

Uninstalling ScanGear CS or the WIA Driver

ScanGear CS and the WIA Driver can be uninstalled using the CanoScan Setup Utlity CD-ROM.

1. Detach the scanner from the computer.
2. Place the CanoScan Setup Utility CD-ROM in the drive.
3. Click [Display the CD-ROM Contents] and click the [CanoScan] icon.
4. Double-click [DELDRV].
5. Select the scanner for which the driver will be deleted.
6. Click [OK] when prompted by the [Uninstalling scanner driver completes] message. Remove the CD-ROM from the drive.

NOTE

- *To install the ScanGear CS scanner driver after deleting the WIA driver, please restart the system and follow the procedure of installation in the Quick Start Guide.*
- *To install the WIA Driver after deleting the ScanGear CS driver, please restart the system and follow the procedure in the "Installing the WIA Driver" topic above.*

©CANON INC. 2003
PRINTED IN CHINA

Macintosh Only

CanoScan 9950F

Precautions for Using the IEEE 1394 (FireWire) Interface

This document advises you of the precautions to take when connecting the CanoScan 9950F to a computer via the IEEE 1394* interface. Ensure that you read and follow these precautions to avoid malfunctions when using the scanner with other equipment that is connected.

* The port for the interface may also be labeled the FireWire port, DV In/Out port or another name.
* This scanner supports IEEE 1394a (FireWire 400) only.

Operating System Requirements

- Mac OS X; Macintosh with a built-in IEEE 1394 port and PowerPC G4/G5 processor running Mac OS X v10.2/v10.3.
  * Only Mac OS X v10.2.7 is not supported.
  * When using a PowerBook, the processor must be PowerPC G4 550MHz or higher.
- Please use the specified IEEE 1394 (FireWire) cable, **Apple M8707G/A** or **M8707** (1.8 m/6 ft., 6pin-6pin). Performance cannot be guaranteed with other cables.

Computer Connections and Power Precautions

1. This scanner will not operate correctly when an IEEE 1394-compatible external hard disk is used as the startup disk.
2. Connect the scanner directly to the computer. Avoid connecting it via a repeater hub or in a daisy chain configuration.
3. Do not use the scanner's USB port and IEEE 1394 port simultaneously and do not connect both ports to the same computer or to more than one computer at the same time.
4. You must always switch the scanner's power off before attaching or detaching the IEEE 1394 cable.
5. Wait 5 seconds or more before switching the scanner's power on again after it has been switched off.
6. You must never switch the power on/off while the scanner or another IEEE 1394 device is operating.
7. If you have other IEEE 1394 devices connected and are experiencing problems with the scanner, try operating the scanner with the other IEEE 1394 devices disconnected.

Other Precautions

1. You must switch the power off on the scanner and other IEEE 1394 devices when installing software.
2. You are advised against scanning directly to a recording device (hard disk, etc.) that is connected via the IEEE 1394 interface when using this scanner. Save the image to the computer's startup disk first and then send it to the auxiliary recording device.

* Macintosh, Mac OS and FireWire are trademarks of Apple Computer, Inc., registered in the U.S. and other countries.

©CANON INC. 2004
PRINTED IN CHINA

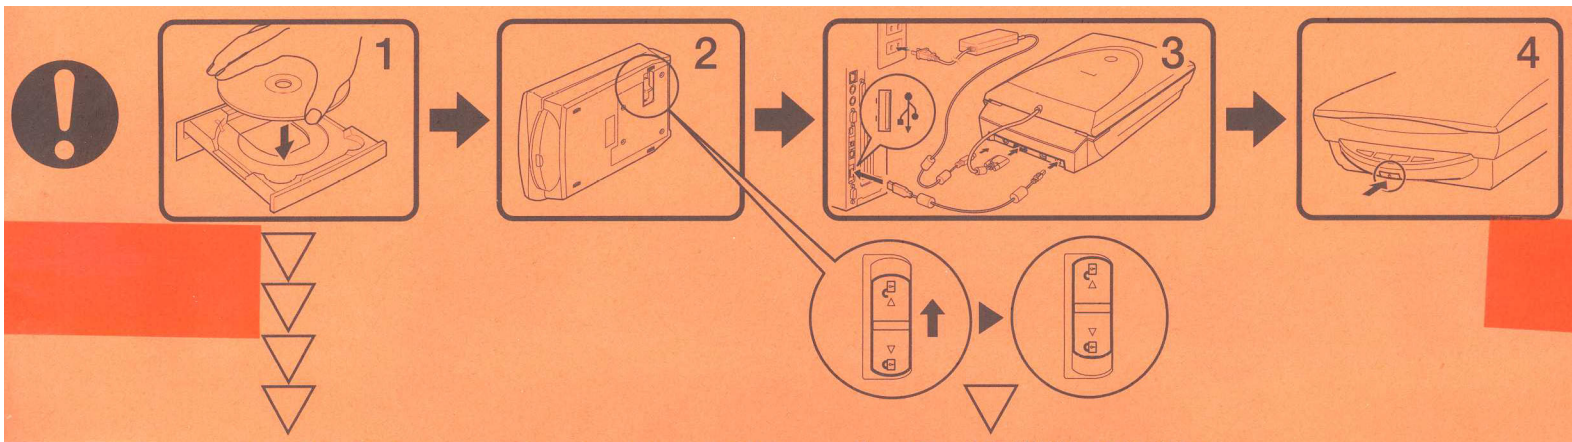

接続前にソフトウェアをインストールしてください
在连接扫描仪前请先安装软件。
在連接掃描器前請先安裝軟件。
제품을 연결하시기전에 소프트웨어를 설치하시기 바랍니다.
Install the software before connecting the scanner.
Installez le logiciel avant de brancher le scanner.
Installare il software prima di collegare lo scanner
Software vor Anschluss des Scanners installieren.
Instale el software antes de conectar el escaner.
Installeer de software voordat u de scanner aansluit.
Instale o software antes de conectar o scanner.
Перед подключением сканера следует установить программное обеспечение.

ロックを解除してください
松开锁扣!
鬆開鎖扣！
잠금 해제!
Unlock!
Déverrouillez!
Sbloccare!
Lösen Sie die Verriegelung!
¡Desbloquear!
Ontgrendelen!
Destrave!
Снимите блокировку!

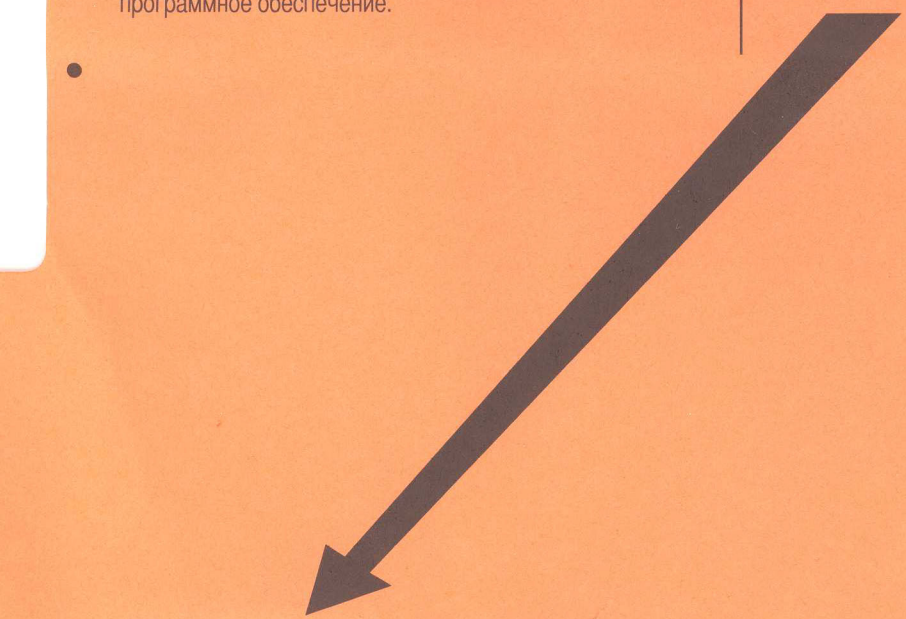

Canon

CanoScan 9950F

COLOR IMAGE SCANNER

Software for Windows®and Macintosh®

CanoScan Setup CD-ROM

E

Ver. 1.01

FB6-6405

For Windows

Software

- ScanGear CS for Windows
- Canon Scanner WIA Driver
- CanoScan Toolbox for Windows
- ArcSoft PhotoStudio
- ScanSoft OmniPage SE
- NewSoft Presto!PageManager
- Adobe Acrobat Reader

Electronic Manual (English)

- CanoScan 9950F User's Guide
- Canon Scanner WIA Driver User's Guide
- ArcSoft PhotoStudio User's Guide
- ScanSoft OmniPage SE User's Guide
- NewSoft Presto!PageManager User's Guide

For Macintosh

Software

- ScanGear CS for Mac (*)
- CanoScan Toolbox for Mac (*)
- ArcSoft PhotoStudio (*)
- ScanSoft OmniPage SE (*)
- Adobe Acrobat Reader (*)

(*)Supports OSX Native mode only

Electronic Manual (English)

- CanoScan 9950F User's Guide
- ArcSoft PhotoStudio User's Guide
- ScanSoft OmniPage SE User's Guide

Canon Solutions

COMPACT disc

Windows is registered trademark of Microsoft Corporation in the U.S. and other countries. Macintosh is registered trademark of Apple computer Inc. Adobe and Acrobat are trademarks of Adobe Systems Incorporated. CanoScan and ScanGear are trademarks of Canon Inc. Other brand and product names are trademarks and/or registered trademarks of their respective companies. Made in Hongkong

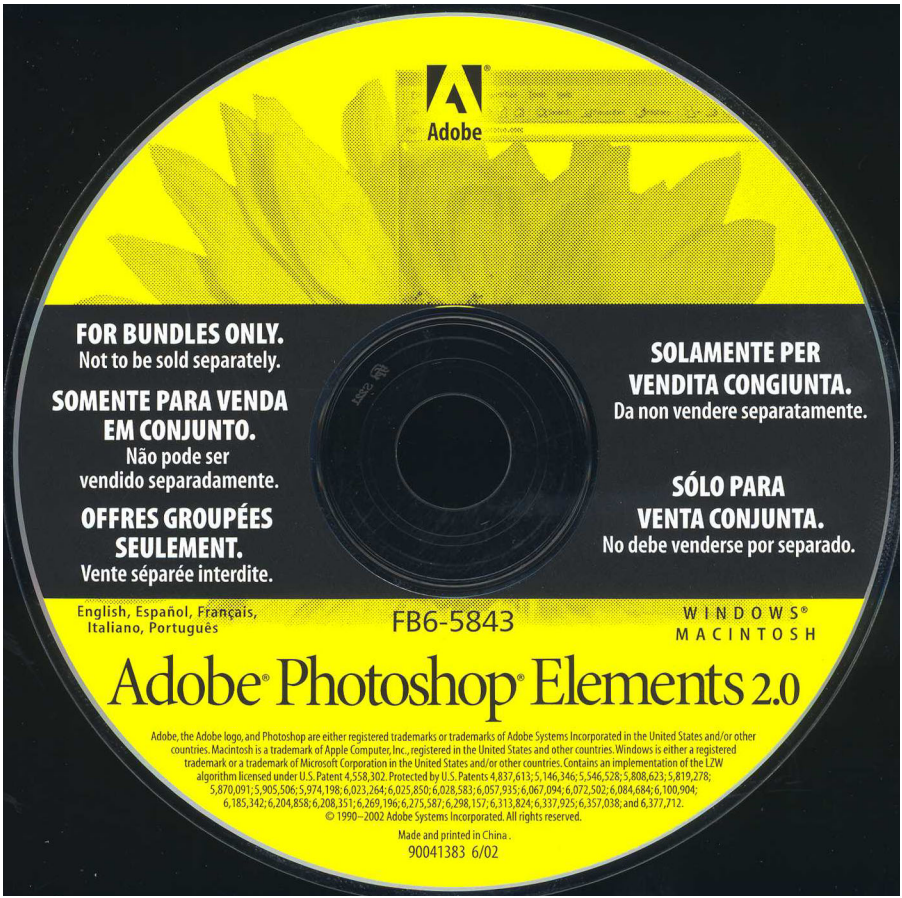

Adobe, the Adobe logo, and Photoshop are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries. Macintosh is a trademark of Apple Computer, Inc., registered in the United States and other countries. Windows is either a registered trademark or a trademark of Microsoft Corporation in the United States and/or other countries. Contains an implementation of the LZW algorithm licensed under U.S. Patent 4,558,302. Protected by U.S. Patents 4,837,613; 5,146,346; 5,546,528; 5,808,623; 5,819,278; 5,870,091; 5,905,506; 5,974,198; 6,023,264; 6,025,850; 6,028,583; 6,057,935; 6,067,094; 6,072,502; 6,084,684; 6,100,904; 6,185,342; 6,204,858; 6,208,351; 6,269,196; 6,275,587; 6,298,157; 6,313,824; 6,337,925; 6,357,038; and 6,377,712.
© 1990–2002 Adobe Systems Incorporated. All rights reserved.

Made and printed in China.
90041383 6/02

ADOBE PHOTOSHOP-2.0

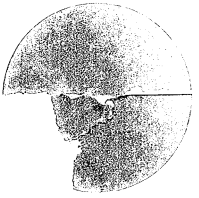

J : この袋にはインストール用のシリアル番号が添付されていますので保管してください。

E : This sleeve will be needed for installation. Do not discard !

F : Cette pochette est nécessaire pour l'installation. Ne la jetez pas !

I : Non gettare la custodia poiché servirà al momento dell'installazione.

G : Die Information der CD-Hülle wird für die Installation benötigt. Bitte aufbewahren.

S : Necesitará este sobre durante la instalación. No lo tire.

BP: Não descarte esta capa! Você precisa do número de série nela para a instalação!

NL: Bewaar dit hoesje zorgvuldig! U hebt het serienummer nodig voor de installatie.

Chinese Simplified:安装将需要此封套。请勿丢弃！

KO:어 케이스는 프로그램 설치 시 필요하므로 반드시 보관하시기 바랍니다.

Canon

Snap.

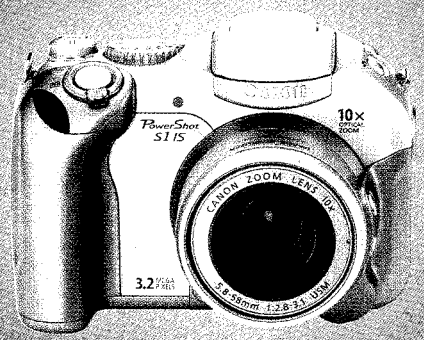

Print.

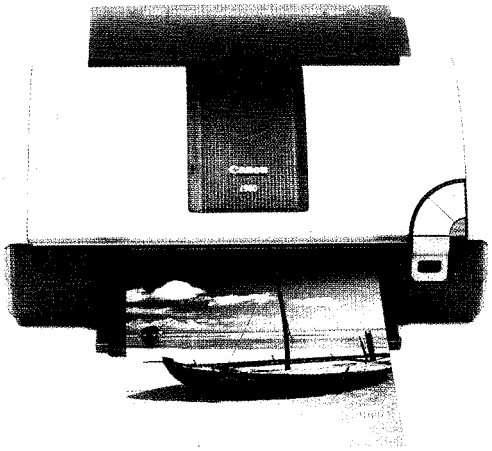

Show.

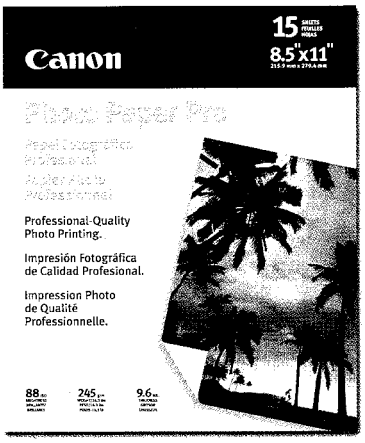

Your Photos.
Canon Solutions.

Snap!

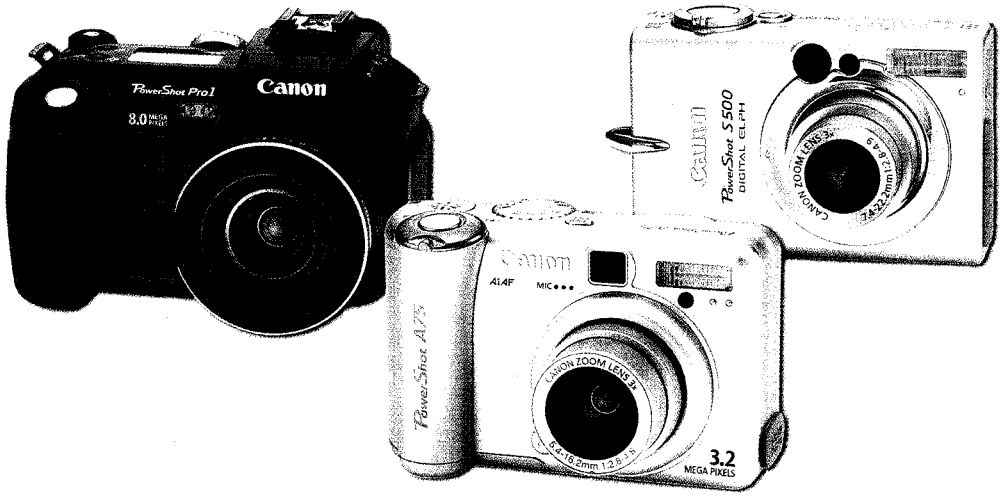

digital revolutionized photography
we revolutionized digital™

Exif Print Our extensive family of digital cameras offers resolution, quality and features for all types of consumers, from first time users to advanced photographers. Exif-compatible PowerShot cameras are perfect companions for your printer, making it even easier to get outstanding print quality and realistic photographs.

- High quality Canon lenses
- Compact, stylish designs
- Features and performance for amateur and advanced photographers

Would you like to know
Check out www.us

Print!

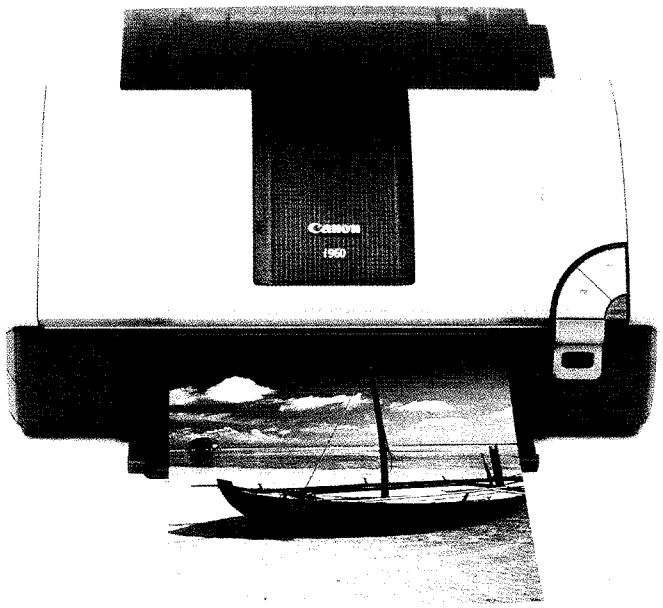

A Whole New Printing Experience

MICROFINE DROPLET TECHNOLOGY™

Canon printers offer Advanced MicroFine Droplet Technology™, featuring smaller, more precise ink droplets. The result is smoother, less grainy prints with incredible detail and remarkable resolution.

- Speed, performance and quality for professional results
- Print borderless photos with most models
- Ideal for home and office

---

re about Canon Products?
anon.com/consumer

Show!

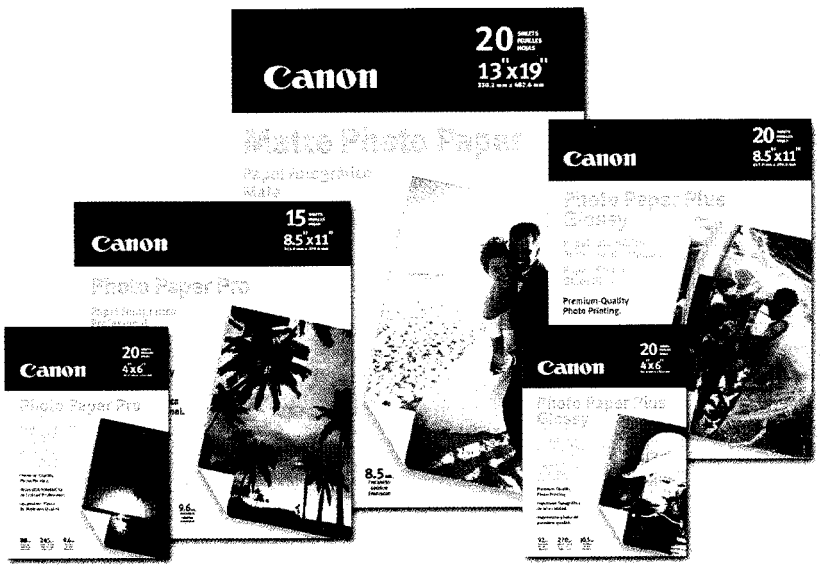

Show off your photos

Canon papers and printers are designed to work together to create the best possible prints. Show off your photos with Canon paper!

- From presentations to photographs: paper for all of your printing needs
- 4" x 6" borderless, edge-to-edge photo papers
- Genuine Canon paper for quality images

©2004 Canon U.S.A., Inc. Canon, digital that inspires, Elf, MicroFine Droplet Technology, the MicroFine Droplet Technology logo and PowerShot are trademarks of Canon Inc. All other product or brand names are trademarks of their respective owners.

Print sample ©2003 Art Brewer. All rights reserved.

Printed in China

S-CROSS-OTH-0504

Canon

Canon U.S.A., Inc.

Limited Warranty—U.S. Only

The limited warranty set forth below is given by Canon U.S.A., Inc. ("Canon USA") with respect to the new or refurbished Canon-brand product ("Product") packaged with this limited warranty, when purchased and used in the United States only.

The Product is warranted against defects in materials and workmanship under normal use and service (a) for a period of one (1) year from the date of original purchase when delivered to you in new condition in its original container or (b) for 90 days from the date of original purchase for refurbished Products. Defective parts or a defective Product returned to a Canon USA repair facility or a Canon USA Authorized Service Facility ("ASF"), and proven to be defective upon inspection, will be repaired, exchanged for new or comparable rebuilt parts, or exchanged for a refurbished Product, as determined by the Canon USA repair facility or the ASF. Warranty repair or replacement shall not extend the original warranty period of the Product. A dated proof of purchase is required at the time of warranty service. A copy of your dated bill of sale will satisfy this requirement. This warranty does not cover any accessories, or any consumables, such as paper or ink cartridges, as to which there shall be no warranty or replacement.

This limited warranty shall only apply if the Product is used in conjunction with compatible computers, peripheral equipment and software. Canon USA shall have no responsibility for such items except for compatible Canon brand peripheral equipment covered by a separate warranty ("Separate Warranty"). Repairs of such Canon brand peripheral equipment shall be governed by the terms of the Separate Warranty. Non-Canon brand equipment and software that may be distributed with the Product are sold "as is" and without warranty of any kind by Canon USA, including any implied warranty regarding merchantability or fitness for a particular purpose, and all such warranties are disclaimed. The sole warranty, if any, with respect to such non-Canon brand items is given by the manufacturer or producer thereof.

This limited warranty covers all defects encountered in normal use of the Product and does not apply in the following cases:

(a) Loss of or damage to the Product due to abuse, neglect, mishandling, improper packaging by you, alteration, accident, electrical current fluctuations, improper use, failure to follow operating or maintenance instructions in, or environmental conditions prescribed in, Canon USA's user's manual or other documentation, or services performed by someone other than a Canon USA repair facility or ASF. Without limiting the foregoing, dropping the Product, scratches, and abrasions will be presumed to have resulted from misuse, abuse or failure to operate the Product as set forth in the user's manual or other documentation for the Product.
(b) Use of parts or supplies (other than those sold by Canon USA) that cause damage to the Product or cause abnormally frequent service calls or service problems.
(c) If the Product has had its serial number or dating defaced, altered or removed.

ANY SYSTEM SOFTWARE (WHETHER FACTORY LOADED ON THE PRODUCT OR CONTAINED ON THE SOFTWARE DISKETTES OR CD-ROMS ENCLOSED WITH, OR ACCOMPANYING, THE PRODUCT), AND ANY UTILITY SOFTWARE, DISTRIBUTED WITH OR FOR THE PRODUCT, IS SOLD "AS IS" AND WITHOUT WARRANTY BY CANON USA. THE SOLE WARRANTY WITH RESPECT TO SUCH SOFTWARE IS CONTAINED IN THE SOFTWARE MANUFACTURER'S LICENSE AGREEMENT DISTRIBUTED THEREWITH, INCLUDING ANY LIMITATIONS AND DISCLAIMERS THEREON. PLEASE CONTACT CANON USA IMMEDIATELY IF YOU HAVE NOT RECEIVED A COPY OF THE SOFTWARE MANUFACTURER'S LICENSE AGREEMENT.

NO IMPLIED WARRANTY, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, APPLIES TO THE PRODUCT AFTER THE APPLICABLE PERIOD OF THE EXPRESS LIMITED WARRANTY STATED ABOVE, AND NO OTHER EXPRESS WARRANTY OR GUARANTY, EXCEPT AS MENTIONED ABOVE, GIVEN BY ANY PERSON OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BIND CANON USA, OR ITS ASF. (SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.) CANON USA SHALL NOT BE LIABLE FOR LOSS OF REVENUES OR PROFITS, INCONVENIENCE, EXPENSE FOR SUBSTITUTE EQUIPMENT OR SERVICE, STORAGE CHARGES, LOSS OR CORRUPTION OF DATA, OR ANY OTHER SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY THE USE, MISUSE, OR INABILITY TO USE THE PRODUCT REGARDLESS OF THE LEGAL THEORY ON WHICH THE CLAIM IS BASED, AND EVEN IF CANON USA OR ITS ASF HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. NOR SHALL RECOVERY OF ANY KIND AGAINST CANON USA OR ITS ASF BE GREATER IN AMOUNT THAN THE PURCHASE PRICE OF THE PRODUCT CAUSING THE ALLEGED DAMAGE. WITHOUT LIMITING THE FOREGOING, YOU ASSUME ALL RISK AND LIABILITY FOR LOSS, DAMAGE OR INJURY TO YOU AND YOUR PROPERTY AND TO OTHERS AND THEIR PROPERTY ARISING OUT OF THE POSSESSION, USE, MISUSE, OR INABILITY TO USE THE PRODUCT SOLD BY CANON USA NOT CAUSED SOLELY AND DIRECTLY BY THE NEGLIGENCE OF CANON USA, OR ITS ASF. (SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE EXCLUSION OR LIMITATION MAY NOT APPLY TO YOU.) THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THE PRODUCT OR THE PERSON FOR WHOM IT WAS PURCHASED AS A GIFT, AND STATES YOUR EXCLUSIVE REMEDY.

(over)

Canon USA offers a range of customer technical support* options:

- Interactive troubleshooting, e-mail technical support, the latest driver downloads and answers to frequently asked questions (**www.canontechsupport.com**)
- Toll-free live technical support Monday-Saturday (excluding holidays) at **1-800-828-4040**
- Telephone Device for the Deaf **(TDD-1-866-251-3752)**
- Repair or Exchange Service Options:
  In the event service is required for the Product during the limited warranty period, Canon USA offers two hardware support options:

  Authorized Service Facility Carry-In / Mail-In Service
  Canon USA's Carry-In/Mail-In Service provides repair or exchange, at Canon USA's option, through Canon USA's Authorized Service Facility (ASF) network. The name and telephone number of the ASF(s) near you may be obtained from Canon USA's Web site at: **www.canontechsupport.com** or by calling the Canon USA Customer Care Center at 1-800-828-4040, or any time while speaking to a technical support person. A Product covered by this limited warranty will be repaired or exchanged, as determined by Canon USA, and returned without charge by the ASF.

  InstantExchange Service **
  Under Canon USA's InstantExchange Service you may exchange an eligible defective Product during the limited warranty period for a new or refurbished Product, at Canon USA's option. This Service is available in the continental Unites States, Alaska and Hawaii and is utilized by calling Canon USA's Customer Care Center at 1-800-828-4040 8 a.m. to midnight Monday through Friday and 10 a.m. to 8 p.m. Saturday (except holidays). The foregoing times are subject to change in Canon USA's sole discretion. If your call is completed by 3pm Eastern Time, Canon USA's repair facility will, at its expense, ship out the replacement product the same day, via overnight courier, for delivery the following business day (second business day in Alaska and Hawaii).

A further explanation of the service/support options is available at the time of your call to the live technical support number(s) above or via the website at **www.canontechsupport.com**. Please note that under the InstantExchange program, a replacement product will be provided to you prior to your return of the defective product. Since the defective product becomes the property of Canon USA at the time of the exchange, the defective product must be returned in the shipping materials provided. If the defective product is not returned, as directed, you will be responsible for the value of the replacement product, for which Canon USA may invoice you.

This limited warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

Canon U.S.A., Inc.
One Canon Plaza
Lake Success, NY 11042
USA

Canon is a registered trademark of Canon Inc.

* Support program specifics are subject to change without notice.
** InstantExchange warranty service is subject to the availability of refurbished or new replacement units.

©2004 Canon U.S.A., Inc. Canon is a registered trademark of Canon Inc.